

LIST OF HAVIS DOCKING STATION
MAGTEK BRACKET COMPATIBILITY

1) GENERAL DYNAMICS

XR1 / GD8000
DS-GD-101
GD4000
DS-GD-301

2) DELL

LATITUDE RUGGED EXTREME

DS-DELL-401
DS-DELL-401-2
DS-DELL-402
DE-DELL-402-3
DS-DELL-403
DS-DELL-405
DS-DELL-405-3
DS-DELL-406
DS-DELL-406-3
DS-DELL-407-Z1

LATITUDE ATG

DS-DELL-231
DS-DELL-233

LATITUDE XFR


DS-DELL-111
DS-DELL-111-3
DS-DELL-113
DS-DELL-403

LATITUDE XT2 XFR

DS-DELL-301
DS-DELL-301-3




3) PANASONIC

TOUGHBOOK 53
DS-PAN-411
DS-PAN-411-2
DS-PAN-412
DS-PAN-412-2
DS-PAN-413

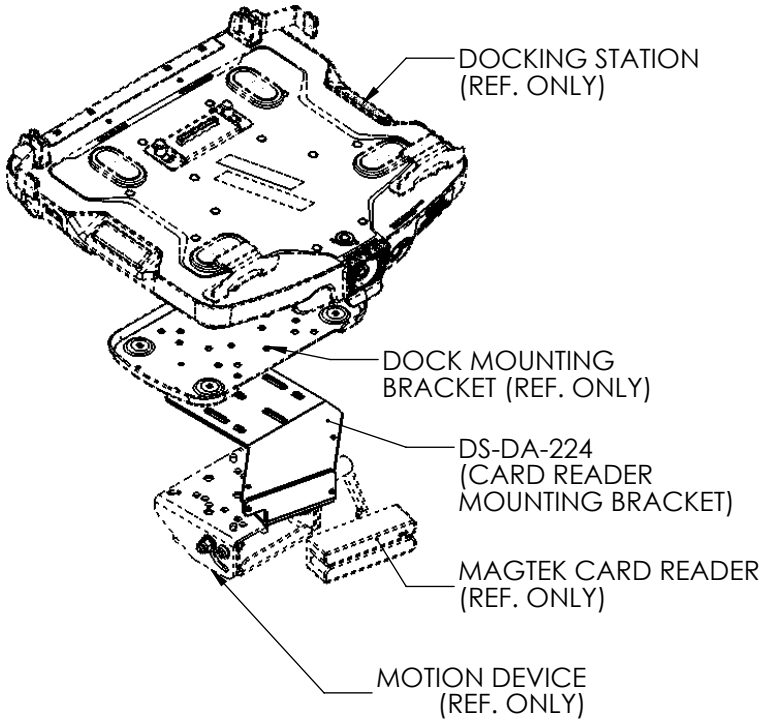

INSTALLATION INSTRUCTIONS

1. REVIEW SPECIFIC DOCKING STATION OWNER'S MANUAL FOR PROPER DOCK INSTALLATION.
2. DS-DA-224 CARD READER MOUNTING BRACKET IS SANDWICHED BETWEEN MOTION DEVICE AND DOCKING STATION.
3. INSTALL AND SECURE MAGTEK CARD READER ONTO MOUNTING BRACKET USING HARDWARE THAT COMES WITH CARD READER.
4. ALIGN DOCK MOUNTING BRACKET HOLES WITH DS-DA-224 MOUNTING BRACKET AND SECURE USING HARDWARE SUPPLIED WITH THE DOCKING STATION.
5. ADJUST CARD READER MOUNTING BRACKET AS NEED TO HAVE PROPER CLEARANCE BETWEEN DOCKING STATION AND MOUNTED CARD READER.

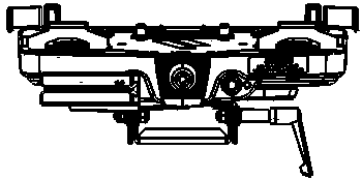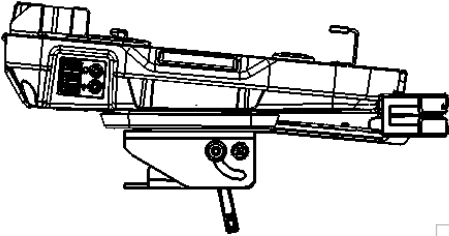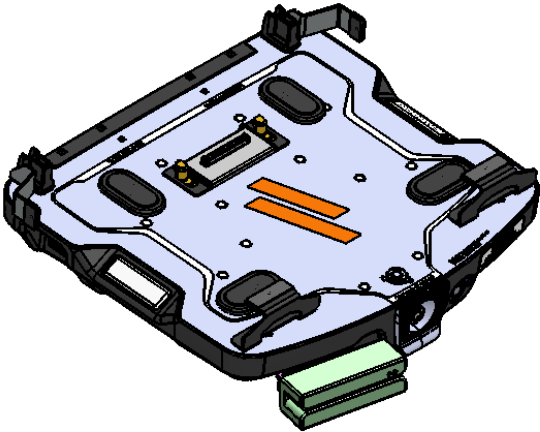

IS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTALLATION INSTRUCTION, MAGTEK CARD READER BRACKET		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. DS-DA-224-INST	REV 7-14
SCALE: 1:8		SHEET 1 OF 1