


# INSTALLATION INSTRUCTIONS C-ADP-114

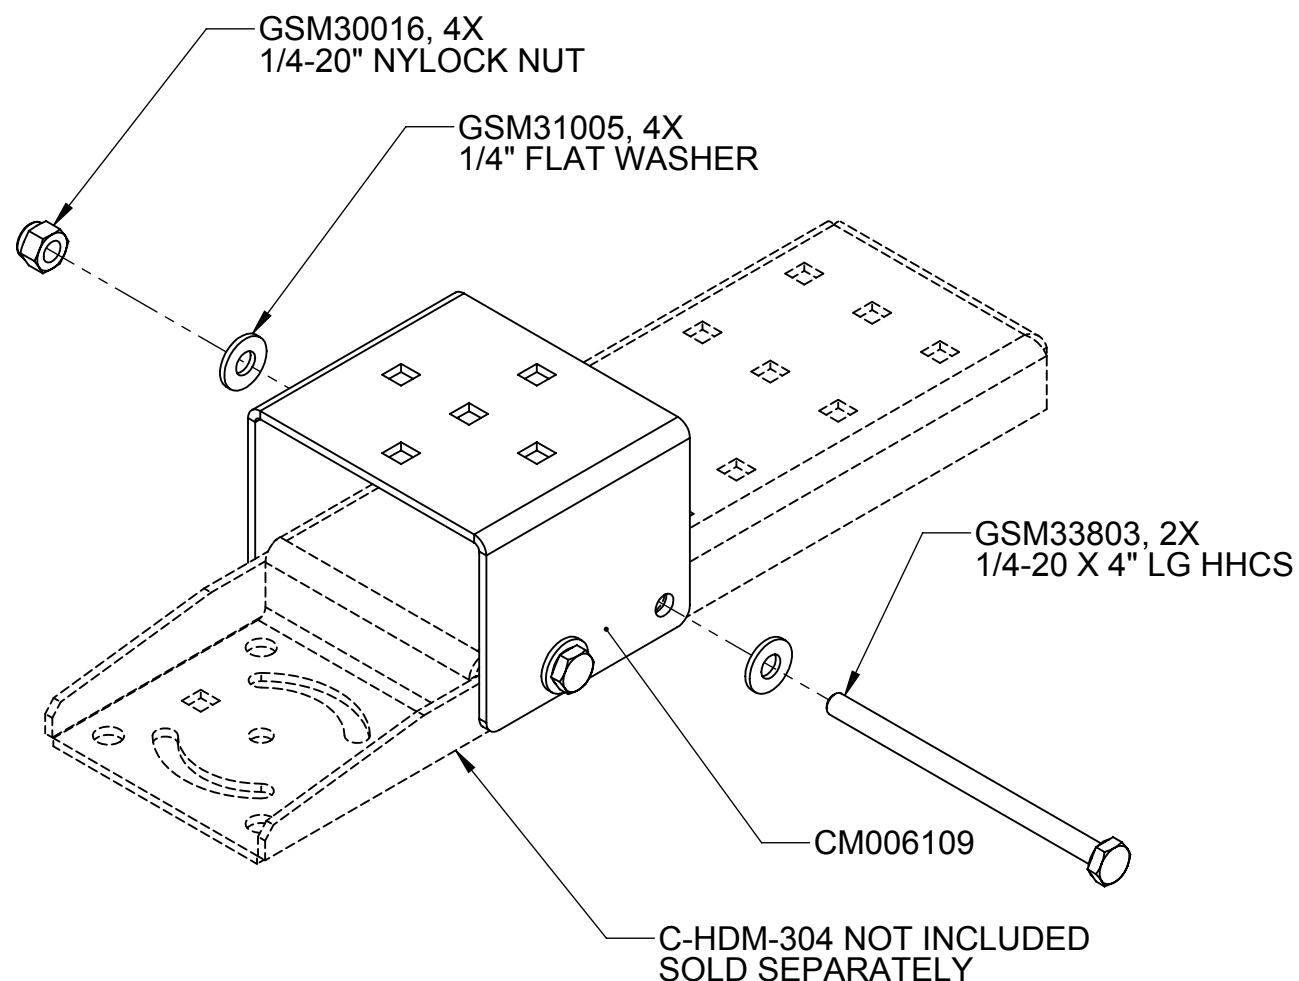

1. DETERMINE IF THE C-HDM-304 HAS THE 4 HOLES REQUIRED TO MOUNT C-ADP-114. IF NOT SEE THE VIEW IN THE BOTTOM LEFT FOR THE APPROXIMATE LOCATIONS OF THE HOLES THAT WILL NEED TO BE DRILLED. CM006109 COULD ALSO BE USED AS A TEMPLATE FOR THE LOCATION OF THE HOLES.
2. **NOTE** ONLY 2 HOLES ARE REQUIRED THE OTHER HOLES ARE FOR ADJUSTMENT PURPOSES ONLY.
3. POSITION CM006109 IN THE DESIRED POSITION. **NOTE** THAT THE HOLE PATTERN IS OFFSET SO THE USER CAN VARY THE FINAL POSITION OF THE MONITOR MOUNT BY TURNING THE BRACKET 180 DEGREES.
4. ONCE THE POSITION HAS BEEN CHOSEN SLIDE THE BRACKET IN PLACE AND USING THE HARDWARE SHOWN LOOSELY ATTACH CM006109 TO C-HDM-304.
5. LOOSELY ATTACH THE C-UMM-101 TO CM006109 USING THE HARDWARE PROVIDED WITH C-UMM-101.
6. TIGHTEN ALL HARDWARE

<b>HAVIS</b> HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: ASSY, UMM-304 ADAPTER		
<b>DO NOT SCALE DRAWING</b>		
SIZE <b>A</b>	DWG. NO. C-ADP-114-INST	REV 4-14
WEIGHT (LB): 2.35	SCALE: 1:2	SHEET 1 OF 1