

INSTALLATION INSTRUCTIONS C-ARM-110

Passenger armrest for 3.3" section of wide consoles

TOOLS REQUIRED:


T-20 Torx driver

7/16" socket

Ratchet set

PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Armrest console plate	24447
1	Torx screws hardware kit	11114
2	#8 x 3/8" Torx screws	13405
2	1/4" serrated nut	16013
2	1/4" Flat washer	16122
2	1/4" x 3/4" Hex head bolt	16326

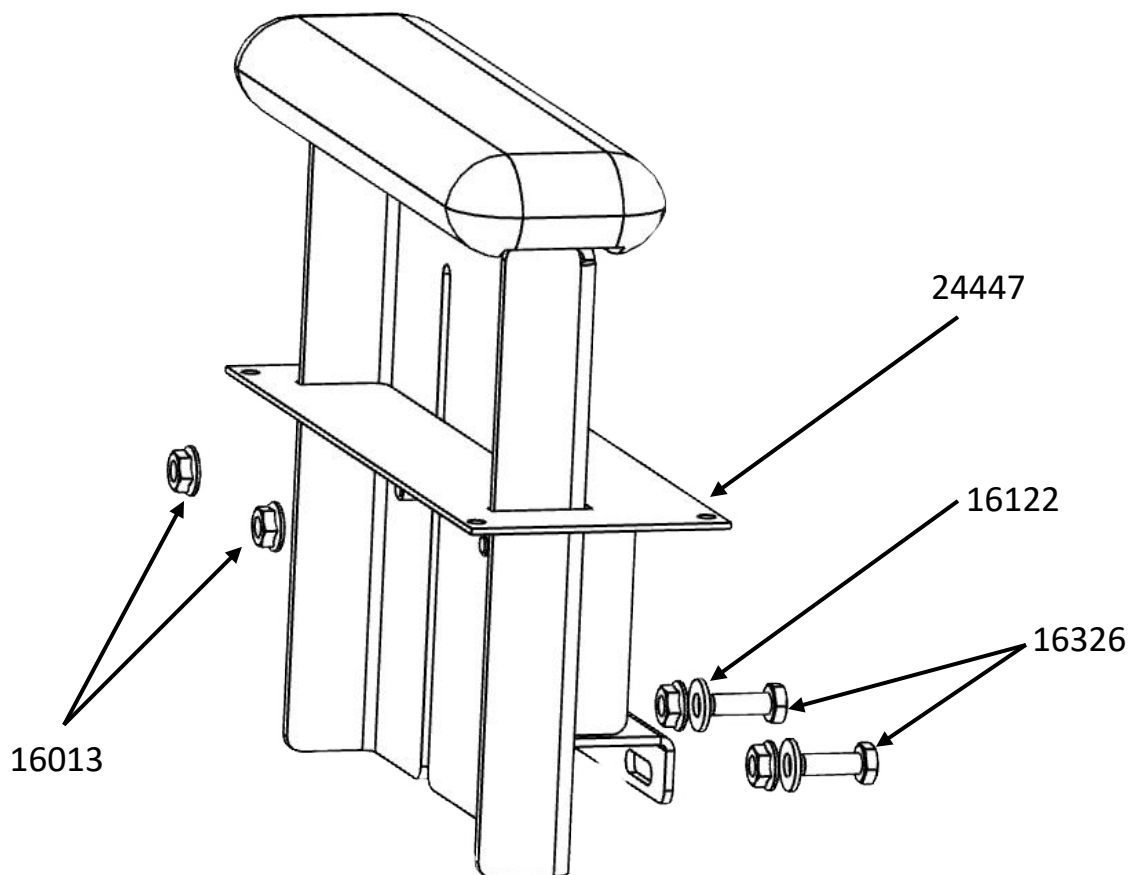



View of C-ARM-110 prior to install



Place Armrest console plate into rear, 3.3" section of console housing.



Line up with holes in side of console. Some consoles may not have holes pre-drilled. Drilling holes may be required.



Install $\frac{1}{4}$ " x $\frac{3}{4}$ " hex head bolts, washers and serrated nuts.



Slide armrest through top of Armrest console plate and determine height.



Tighten $\frac{1}{4}$ " serrated nuts to lock height.
Install is now complete.