
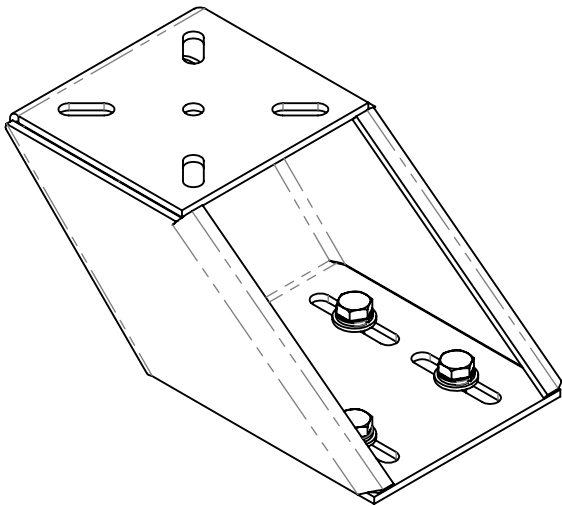


INSTALLATION INSTRUCTIONS:

- 1. Place lower offset base over threaded inserts and use hardware given to install to passenger side mount base.
- 2. Check that each fastener is tightened to the torque indicated on this document.

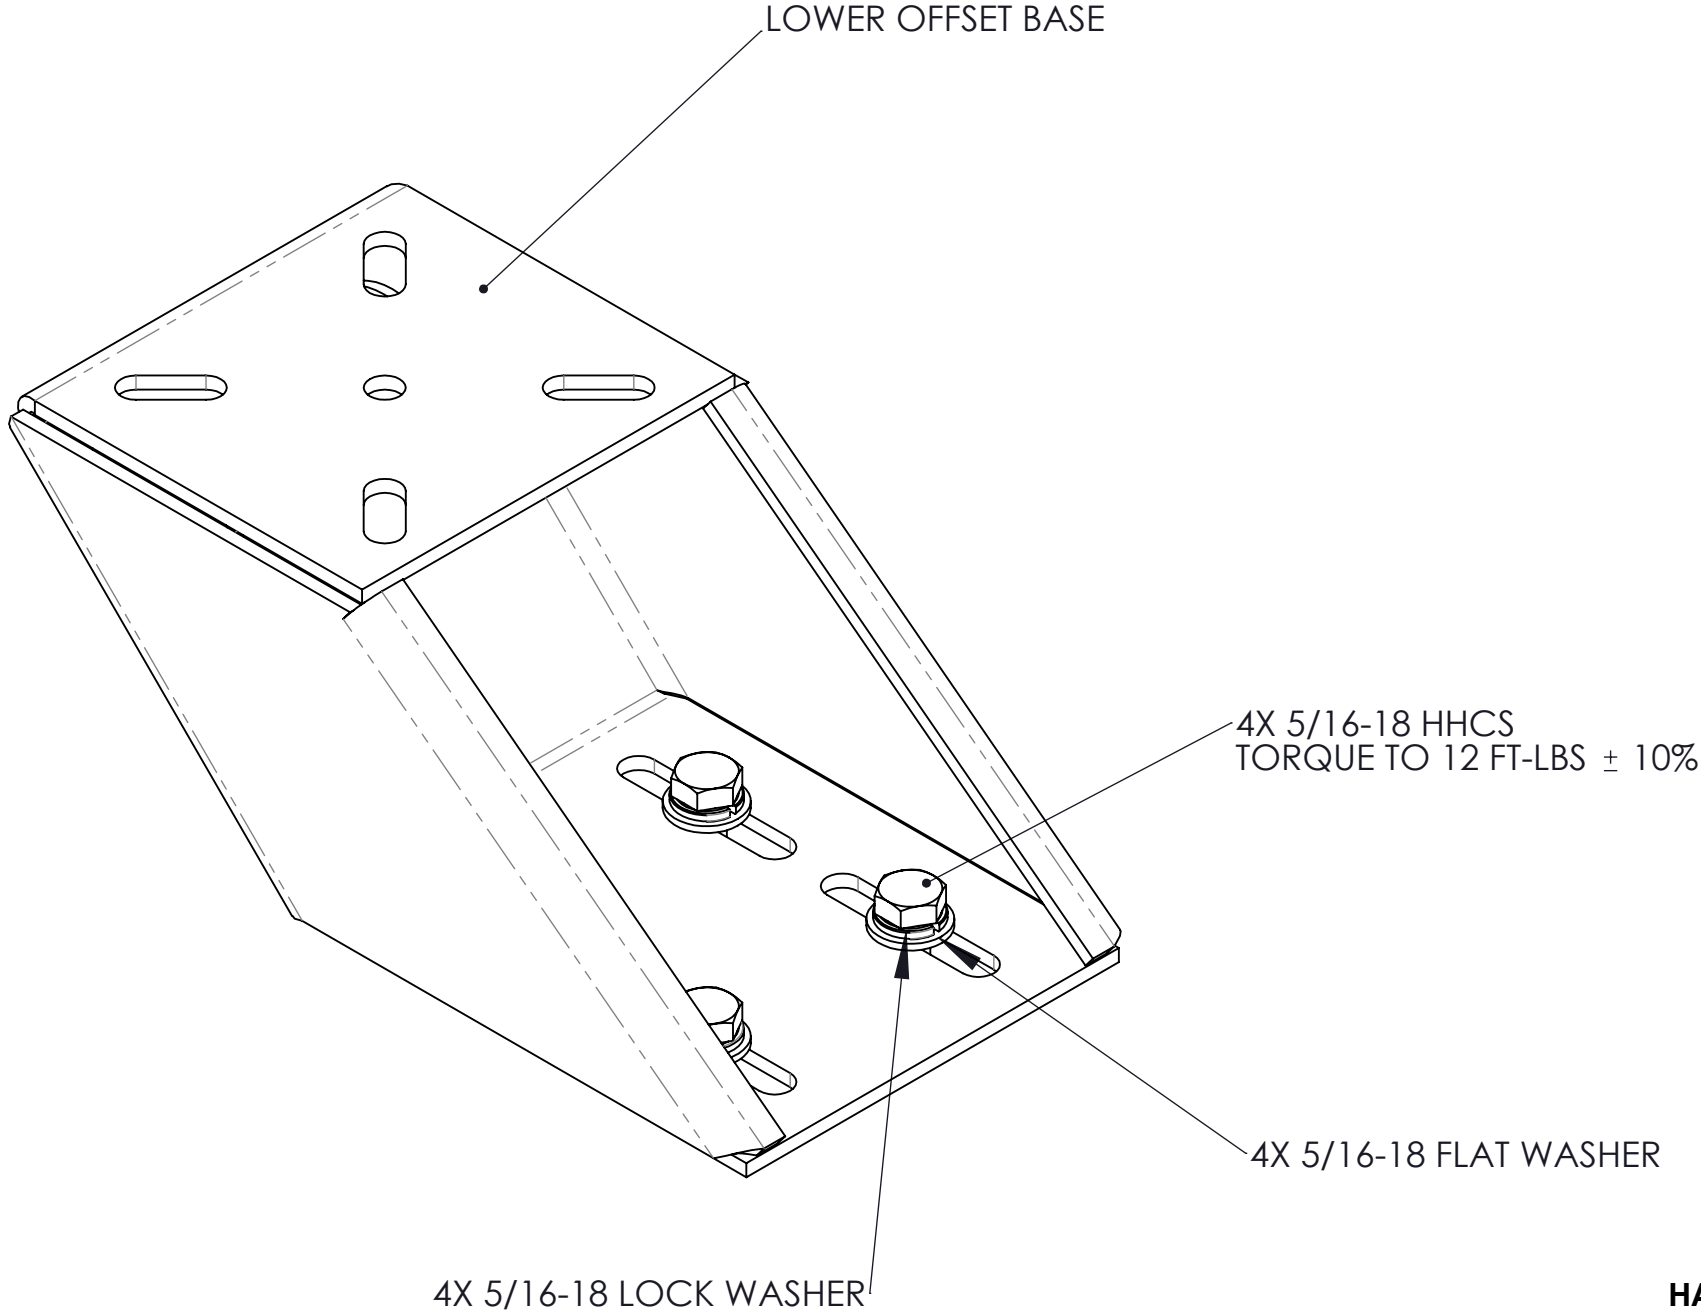

HARDWARE KIT CONTENTS:

DESCRIPTION	QTY.
FLAT WASHER - 5/16- 18	4
LOCK WASHER - 5/16-18	4
HHCS - 5/16-18 X 3/4"	4

REFERENCE #	DATE
<b>C-HDM -410-412</b>	<b>08-14-09</b>

PRODUCT NAME
<b>LOWER OFFSET BASE</b>

<b>HAVIS</b> 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS)
	<b>3.12</b>
	REV. DATE

DRAWING NUMBER:  
**C-HDM-410-412-INST**

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

PRODUCT DESCRIPTION  
**USED WITH MOST PASSENGER SIDE MOUNTS TO OFFSET THE TUBE TOWARD THE CENTER HUMP/CONSOLE.**