


INSTALLATION:

1. SLIDE THE TWO FRONT MOUNTING BRACKETS UNDER THE AIR DUCT AND ONTO THE OEM STUDS, REUSE OEM NUT AND TIGHTEN.
2. SLIDE THE REAR MOUNTING BRACKET UNDER OEM WIRING AND PLACE ONTO THE OEM STUDS. PLACE THE REAR BRACE PIECE ON TOP AS SHOWN. REUSE OEM NUTS AND TIGHTEN
3. USE CARRIAGE BOLTS AND FLANGE NUTS TO SECURE THE REAR BRACE PIECE TO THE REAR MOUNTING BRACKET.
4. LOOSELY ATTACH THE TRAK MOUNT TO THE CENTER MOUNT BY USING THE 1/4"-20 BOLTS AND FLANGE NUTS
5. PLACE THE CENTER MOUNTS ON THE BRACKETS AND ALIGN THE TRAK MOUNT.
6. REMOVE AND TIGHTEN HARDWARE
6. ATTATCH CENTER MOUNTS TO MOUNTING BRACKETS BY USING 1/4"-20 BOLTS, LOCK WASHERS, AND FLAT WASHERS
7. SLIDE 1/4"-20 NUTS INTO EDGE SLOT OF TRAK MOUNT AND ATTATCH SIDE SKIRTS USING 1/4"-20 BOLTS, LOCK WASHERS, AND FLAT WASHERS
8. ATTATCH END CAPS TO TRAK

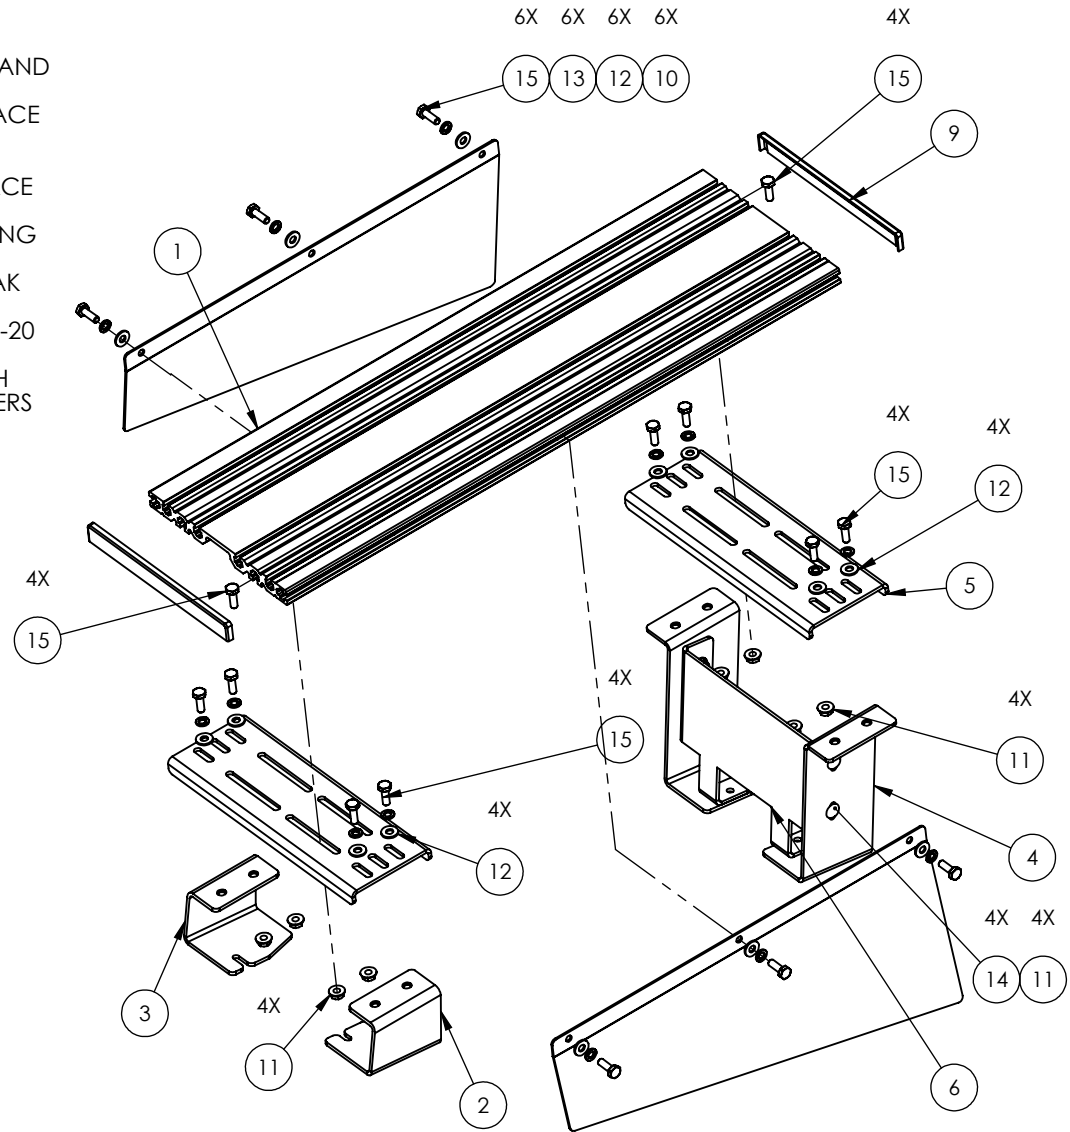

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION	Revision
1	1	10-009431-19	8" WIDE TRAK MOUNT 26" LONG	A
2	1	10-010094-DS	BRKT, TMW FRONT MOUNTING, FORD INUT, DS	A
3	1	10-010094-PS	BRKT, TMW FRONT MOUNTING, FORD INUT, PS	A
4	1	10-010095	BRKT, INUT TMW REAR MOUNTING	A
5	2	10-010172	BRACKET, CENTER, HUMP, INUT 2020 TMW	A
6	1	10-010174	BRKT, INUT, TMW, REAR, BRACE	A
7	1	10-010225-DS	TMW, INUT, SKIRT, DS	A
8	1	10-010225-PS	TMW-INUT-SKIRT-PS	A
9	2	30-002527A	KIT, TRAK MOUNT GASKET AND END CAP	A1
10	6	GSM30005	NUT 1/4-20 HEX BLK, ZINC, GRD 5	
11	12	GSM30023	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK	
12	14	GSM31005	WASHER, 1/4 FLAT ZP, BLACK	
13	14	GSM31026	WASHER 1/4 LOCK ZP BLK	
14	4	GSM32000	BOLT, 1/4-20 x 3/4 CARRIAGE ZP, BLK	
15	22	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP BLK	

HAVIS		HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900	
TITLE: INUT TMW INSTALLATION INSTRUCTIONS					
DO NOT SCALE DRAWING					
SIZE A	DWG. NO. C-TMW-INUT-02-INST			REV 10-19	
WEIGHT (LB): 21.57		SCALE: 1:4		SHEET 1 OF 1	