

INSTALLATION INSTRUCTIONS

CBR-INUT-1 Cargo barrier for 2020 Ford Interceptor Utility

Requires Pro-Gard rear partition

TOOLS REQUIRED:

Standard socket set

7/16" Open-end wrench

Screwdriver set


PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Rear support bracket	CM010056
1	Driver side cargo barrier	CM010057-DS
1	Passenger side cargo barrier	CM010057-PS
2	Stiffening brace	CM010279
1	Driver side rear mounting bracket	CM010280-DS
1	Passenger side rear mounting bracket	CM010280-PS
76"	Edge molding	PRM98343
2	#8-18 x 3/4" Phillips head screw	GSM34257
12	1/4" Serrated nut	GSM30023
12	1/4" x 3/4" Carriage bolt	GSM32000
2	#8 Star washer	GSM31033

Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
 - Use hardware provided with install kit

CBR-INUT-1

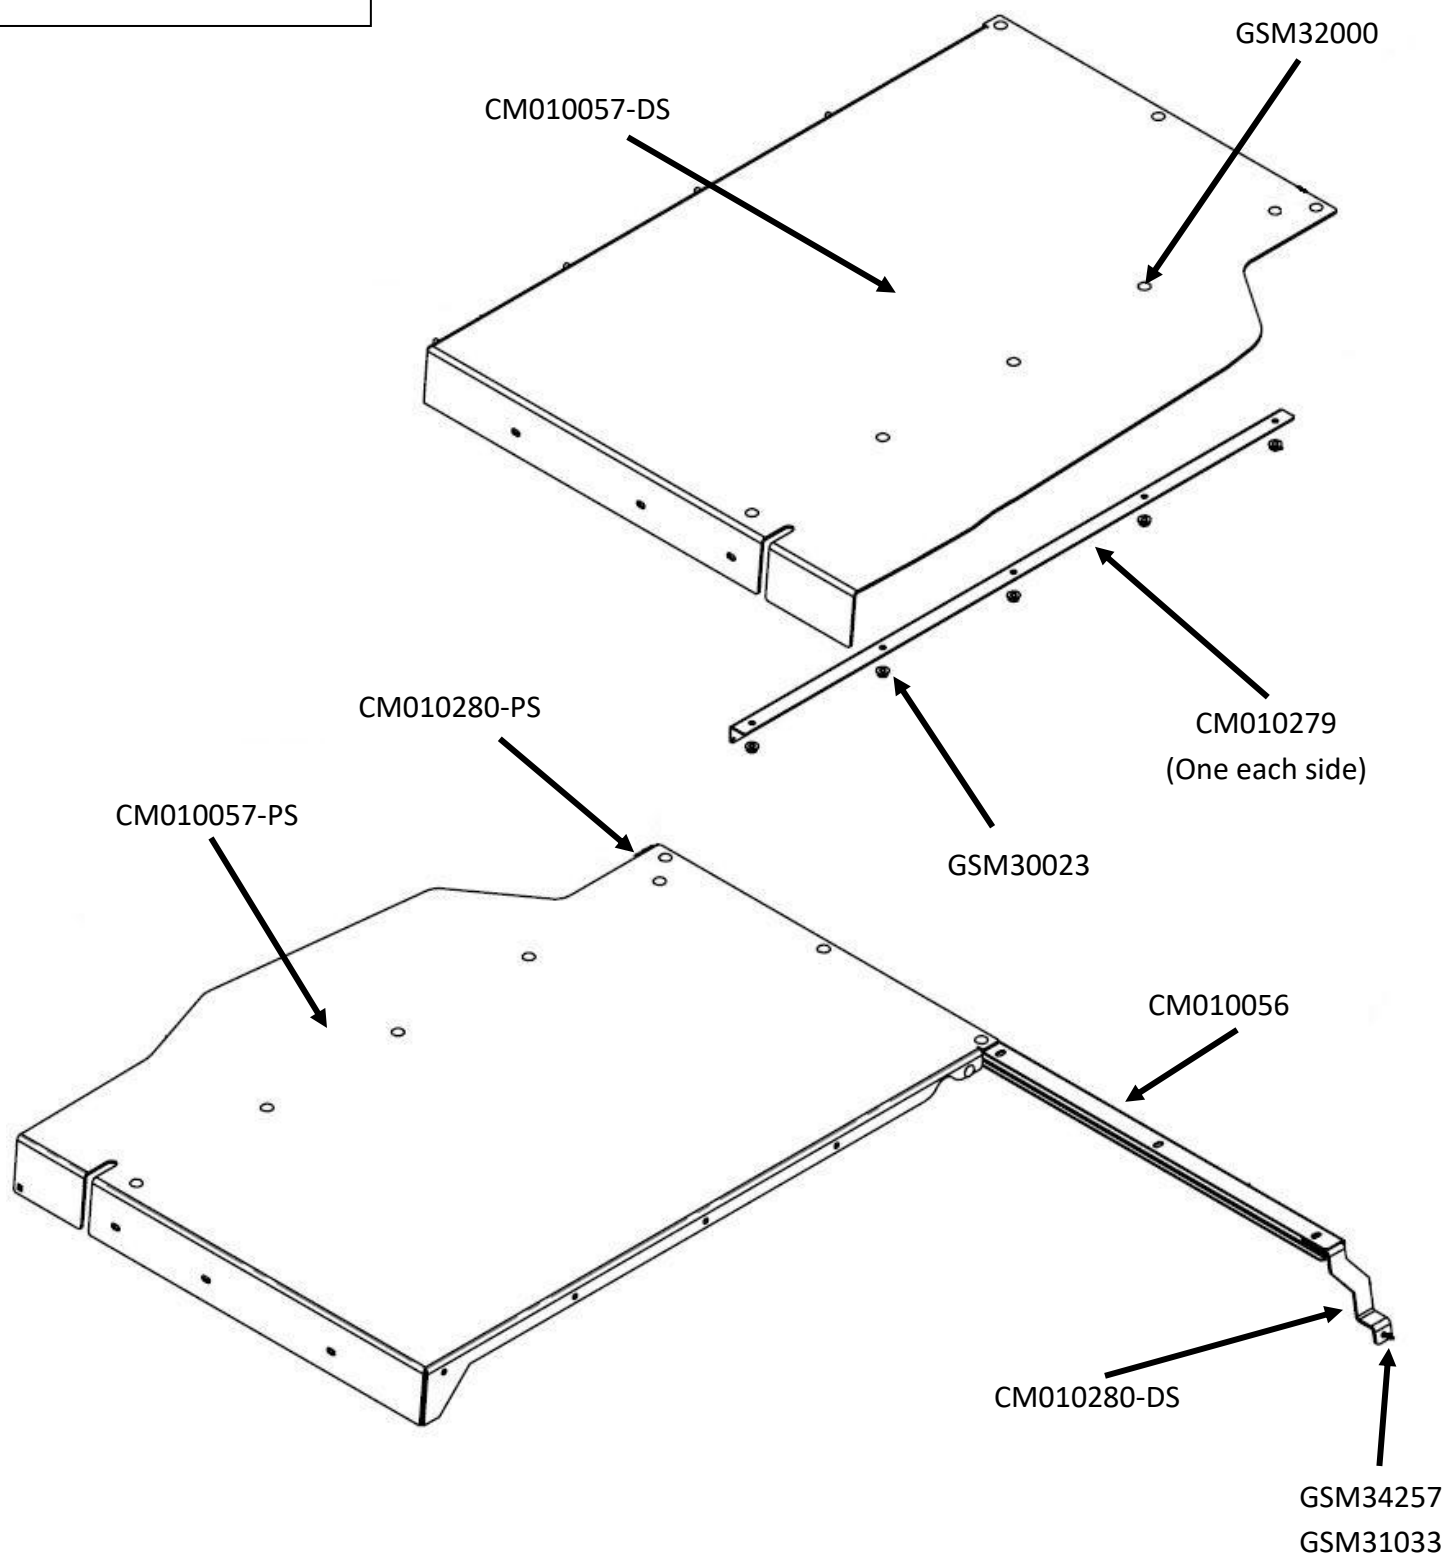



Remove OEM hook

Repeat for other side



Attach rear-mounting brackets using
#8 x 3/4" screws and #8 star washers.

Repeat for other side



Remove (6) serrated nuts from rear
of Pro-Gard partition.
Set aside for later step.



Place driver side, rear cargo barrier
into back of vehicle.

Note: Attach stiffening brace on
bottom side with 1/4" x 3/4" carriage
bolts and nuts prior to installation.




Attach to rear partition using
previously removed serrated nuts.

Repeat for other side



Attach both cargo barrier sides
together using 1/4" x 3/4" carriage
bolts and nuts.

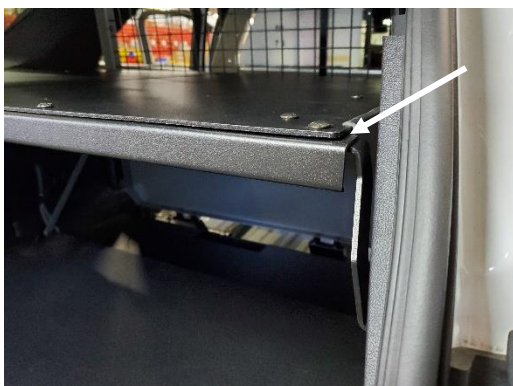

Slide rear support brace between
cargo barrier and rear-mounting
brackets.

Attach using 1/4" x 3/4" carriage
bolts and nuts.



Installation is now complete.



CBR-INUT-1 shown with C-TTP-
INUT-1200.