

## INSTALLATION INSTRUCTIONS

### CBR-TAH-1 Cargo barrier for 2021-2022 Chevy Tahoe PPV

*Requires C-TTP-TAH-103 trunk tray and C-SBX-101 storage box (sold separately)*

**OR**

*Requires C-TTP-TAH-105 trunk tray and SBX-1000 series drawer and SBX-4010 (sold separately)*

#### **TOOLS REQUIRED:**

Standard socket set

7/16" Open-end wrench

Screwdriver set

#### **PARTS and MOUNTING HARDWARE:**

<b><u>QTY</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PART#</u></b>
1	Center Top panel	24977
1	Center bottom panel	24978
1	Driver side wing (clear polycarbonate)	24979
1	Passenger side wing (clear polycarbonate)	24980
4	Mount bracket	24981
2	Side Brace	25144
20	1/4" Serrated nut	16013
23	1/4" x 3/4" Carriage bolt	16223

#### **CBR-TAH-1 INSTALLATION:**

1. Prior to placing Cargo Barrier into vehicle, install C-TTP-TAH-103 trunk tray and C-SBX-101 storage box **OR** C-TTP-TAH-105 trunk tray, SBX-1000 series drawer and SBX-4010 connector kit.

#### **2A. C-SBX-101 application:**

- Remove all 1/4" x 1/2" carriage bolts in C-SBX-101 back panel except for top center bolt.
- Place CBR-TAH-1 center bottom panel into vehicle through side door and attach to back of box with 1/4" x 3/4" carriage bolt bolts and previously removed nuts.

#### **2B. SBX-1000 application:**

- Attach mount brackets to CBR-TAH-1 center bottom panel using 1/4" nuts.
- Place CBR-TAH-1 center bottom panel assembly into vehicle through side door and attach to sides of drawer extrusions with SBX-4010 hardware.

#### **3. For Both Applications:**


- Loosely attach bottom panel, top panel, side brace's and side wings together using 1/4" x 3/4" carriage bolts and nuts.

#### **4. Tighten all hardware.**

#### **Always!**

- Read all instructions before installing any Havis, Inc. products.
- Use hardware provided with install kit

**CBR-TAH-1  
Assembly**

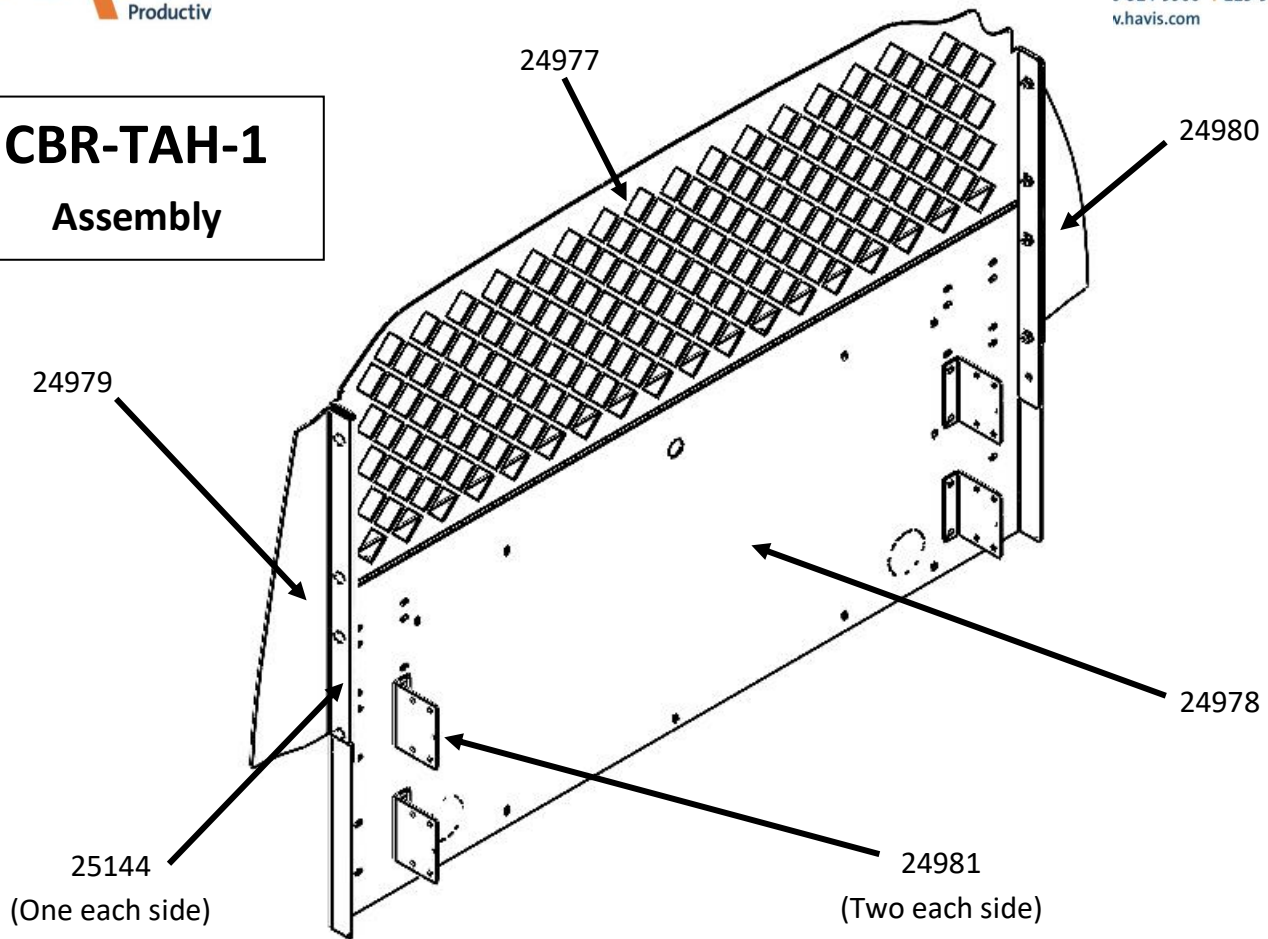

CBR-TAH-1 with C-TTP-TAH-103 and C-SBX-101 Installation complete.