


INSTALLATION INSTRUCTIONS

1. REMOVE EXISTING COVER PLATE FROM COMPARTMENT FORWARD BENCH.
2. UNLOCK THE STORAGE DOOR PRIOR INSTALL FOR HARDWARE ACCESS.
3. ALIGN ALL MOUNTING HOLES TO AN EXISTING HOLES AND SECURE USING SUPPLIED HARDWARE (10/32 SCREWS AND KEPS NUT).

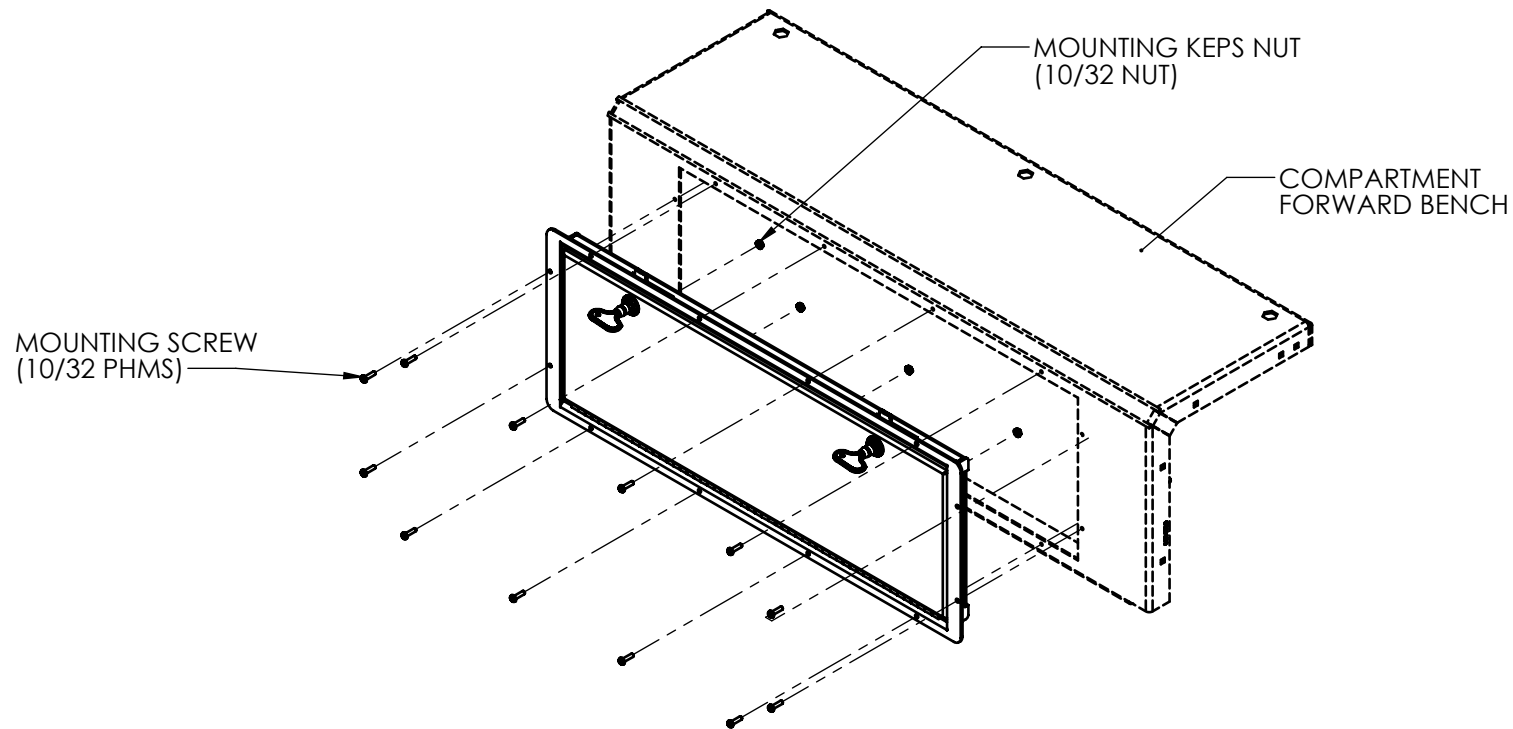

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTALL INSTRUCTION		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. PT-A-906-INST	REV 11/15
SCALE: 1:16		SHEET 1 OF 1