


# PT-A-907-INST INSTALLATION INSTRUCTIONS

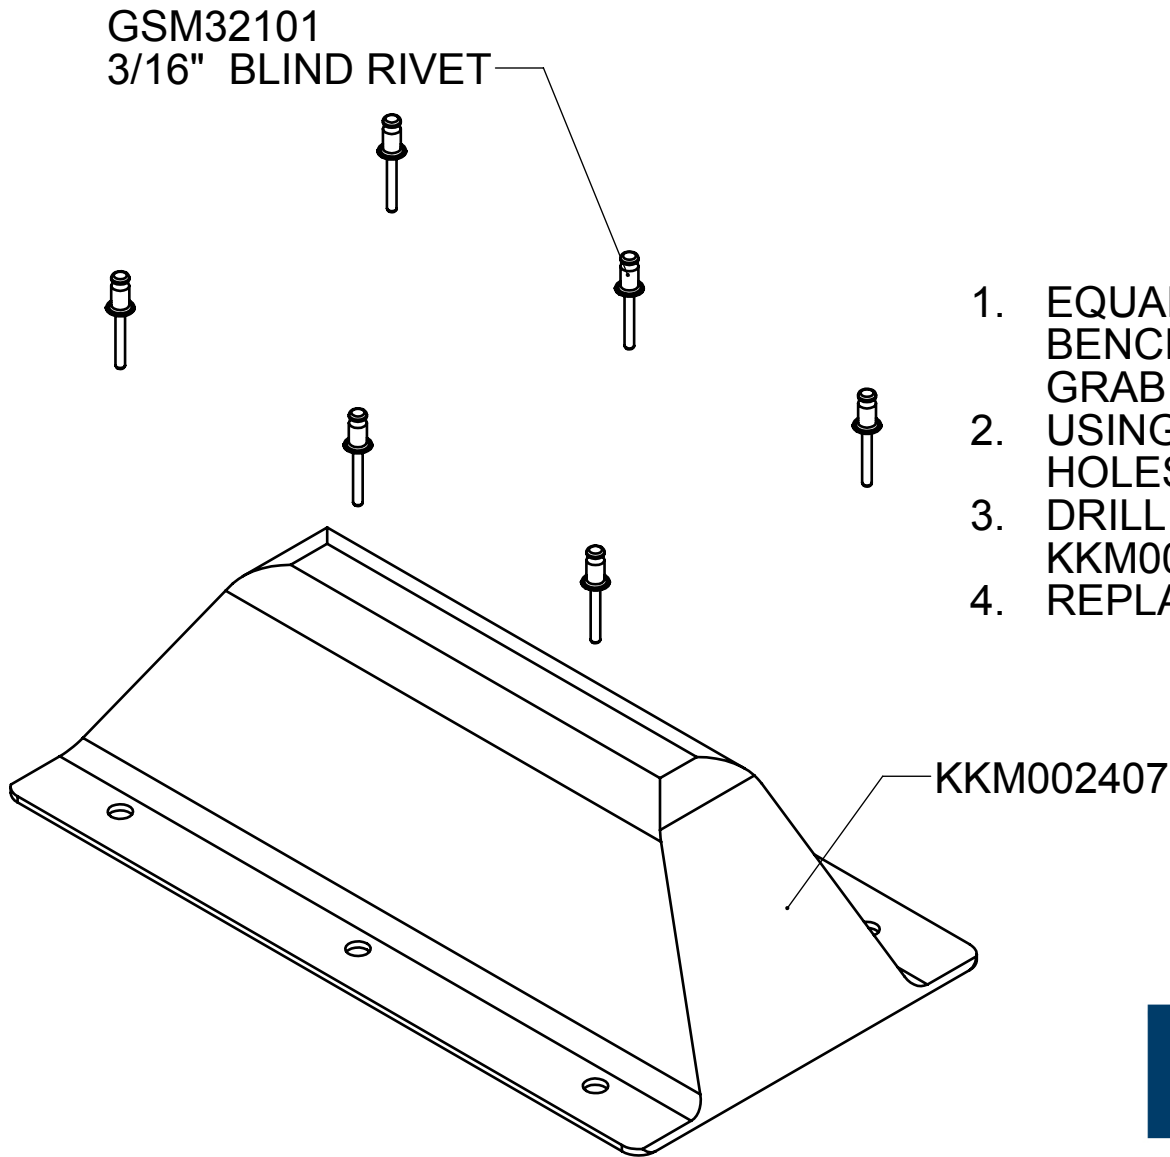

1. EQUALLY SPACE KKM002407 ALONG THE BENCH, SHOULD BE IN LINE WITH EXISTING GRAB STRAP/SEAT BELT BOLTS.
2. USING KKM002407 MARK THE CENTER OF THE HOLES
3. DRILL 6 HOLES .192-.196" FOR EACH KKM002407
4. REPLACE KKM002407 AND RIVET IN PLACE

