
## **INSTALLATION INSTRUCTIONS:**

- Review the parts list and ensure you have all parts and tools required for assembly.
- If converting another UT-2000 series product, first remove the existing side lugs and rear fences.
- Loosely assemble the new kit to the base tray as shown in the exploded view.
- Adjust and tighten the new kit according to the configuration instructions in the UT-2000 Series owner's manual or go to www.havis.com for more information.

NOTE: Retain all unused hardware for possible future re-use.

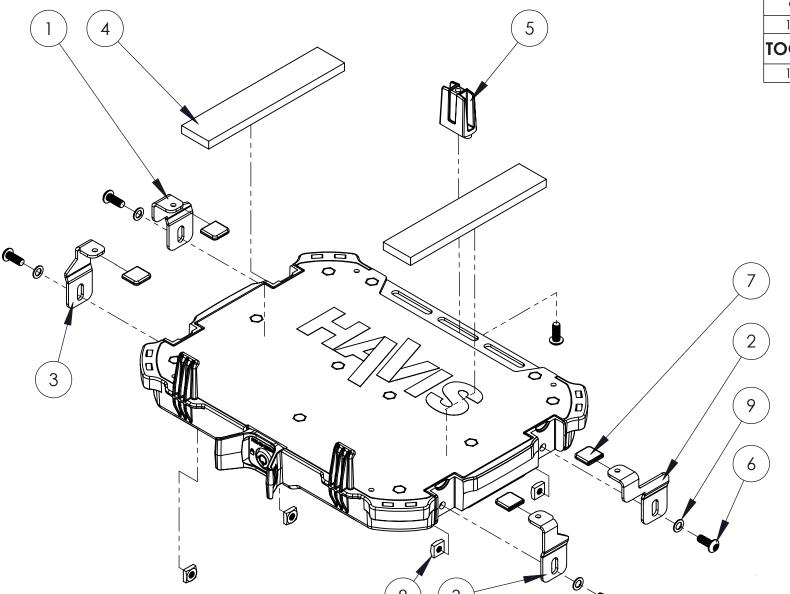

**UT-2006-KIT HARDWARE CONTENTS** REPLACEMENT PARTS **ITEM HAVIS PART** QTY. **DESCRIPTION** NO. NUMBER LUG, OFFSET UPPER LEFT, UT-201, SURFACE PRO 3, 4 10-006608 2 LUG, OFFSET UPPER RIGHT, UT-201, SURFACE PRO 3, 4 10-007759 10-007772 LUG, LOWER, UT-201, SURFACE PRO 3, 4 GSM35054 NEOPRINE FORM RUBBER, 5" LG. 5 FENCE, REAR, UT-200 SERIES UT-0199-ML 6 SCREW, BUTTON HEAD, PIN-IN-TORX, #10-32 X 0.5" GSM33327 CAP - 0.45" X 0.5", 0.04" THK HW-CA-0001/GSM41120 NUT, #10-32 X 0.375" SQUARE X 0.130" HW-MN-0004/GSM30110 WASHER, BELLEVILLE, SERRATED, #10 HW-SW-1262/GSM31089 9 10 INSTALLATION INSTRUCTIONS, UT-2006-KIT UT-2006-KIT INST TOOLS

> 3 PRODUCT I.D.

**DRAWING NUMBER:** UT-2006-KIT\_INST\_6-19

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE IDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND

**UNIVERSAL TRAY, UT-2000 SERIES,** MICROSOFT SURFACE PRO 3/4

L-KEY TAMPER-RESISTANT, T25, 2-13/32" L

**UT-2006 KIT** 

HW-AW-0006/GSM50261

WWW.HAVIS.COM

**UT-2006-KIT** 

PRODUCT NAME

WEIGHT: (LBS)

06-07-19

DATE

REV. DATE 6-19