



# INSTALLATION INSTRUCTIONS:

1. REMOVE 4X GSM33178 AND CENTER BRACKET FROM C-PM-122
2. PLACE RETROFIT CENTER BRACKET IN C-PM-122 AND INSTALL 4X NEW GSM33178
3. PLACE C-PM-122 IN CONSOLE AND INSTALL WITH C-HK-5 PROVIDED WITH C-PM-122 (C-VSW-3000-F150-1 SHOWN)

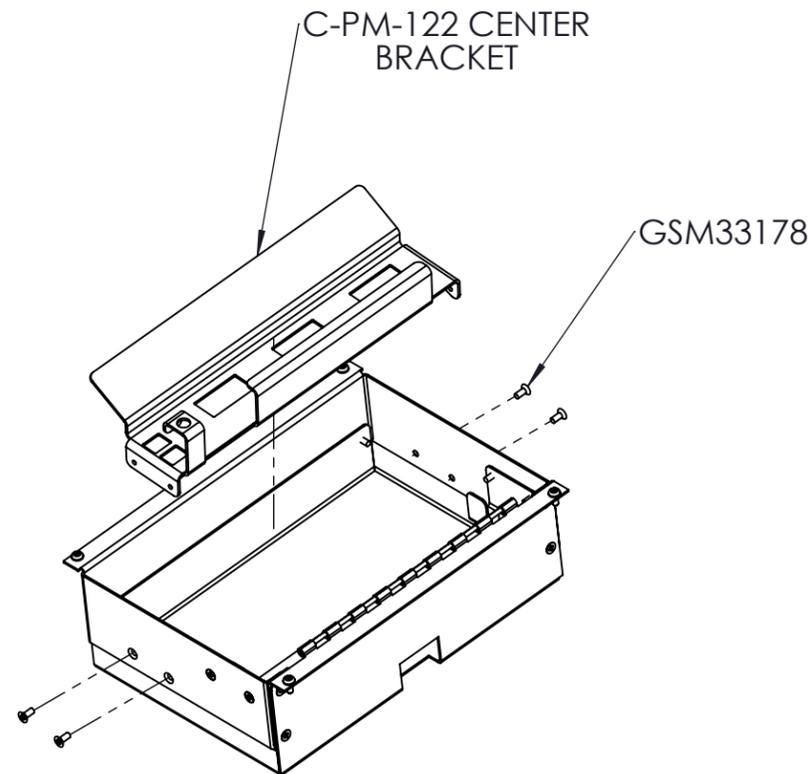


STEP 1

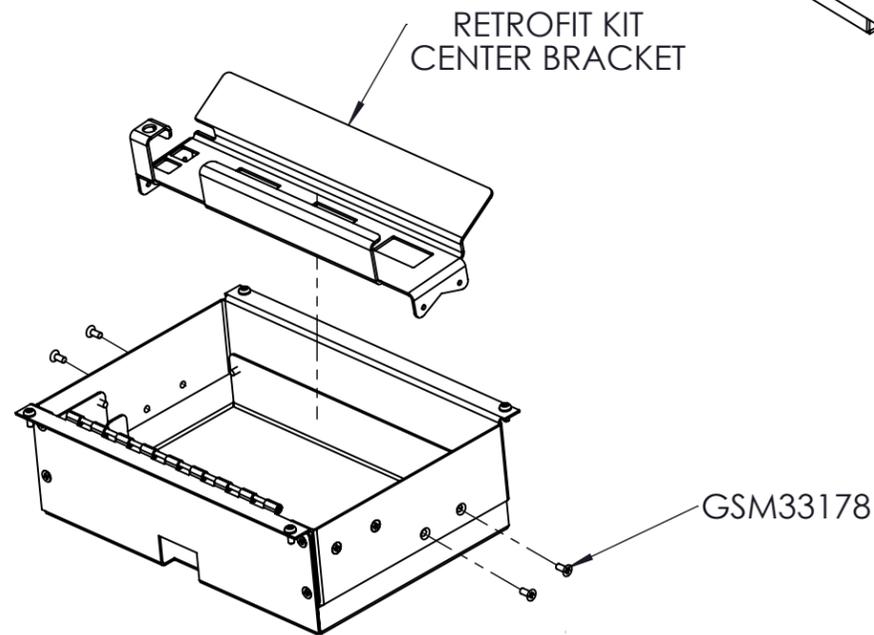

STEP 2

**WARNING:** ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

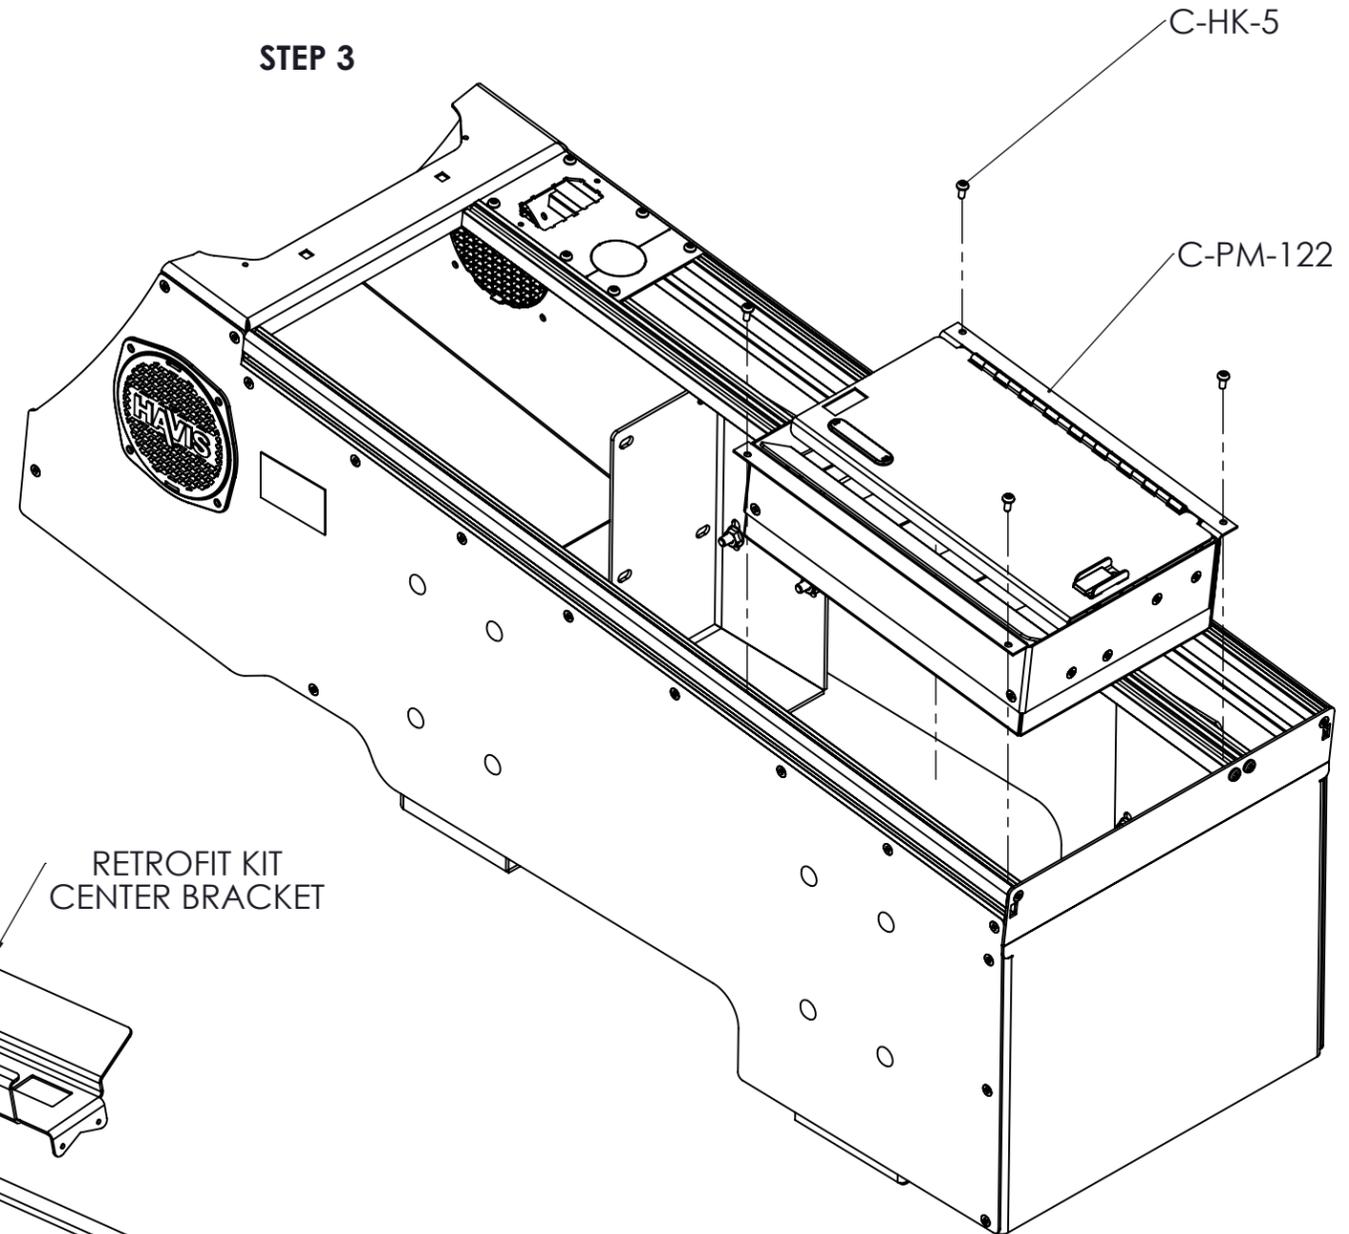

DRAWING NO.  
**C-PM-122-RFK-INST**

PRODUCT DESCRIPTION  
**INSTALLATION  
INSTRUCTIONS, C-PM-122  
RETROFIT KIT**

**HAVIS**  
1-800-524-9900  
WWW.HAVIS.COM

WEIGHT: (LBS)  
**43.790**

REV. DATE  
**01/04/23**