


TOOLS

RECOMMENDED


Torque setting 40CNm
for all screw fixings



+
PZ





PARTS

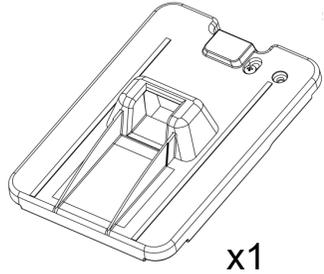


1

Locate PEDPack in line with three holes highlighted – push down into unit

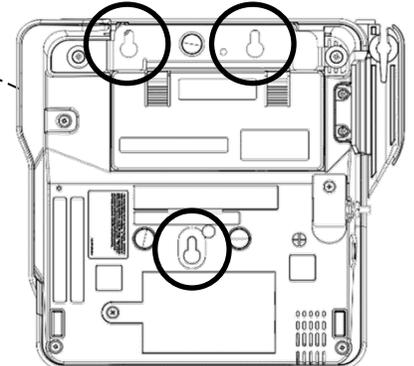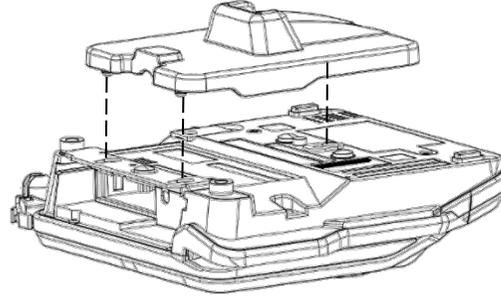

2

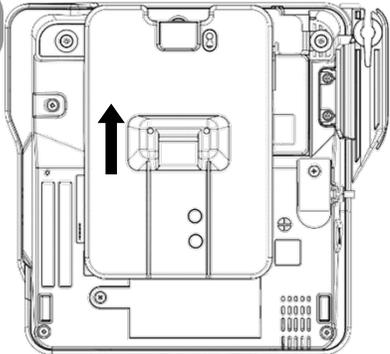


Push forwards until feel click – check PEDPack **CANNOT** be lifted back off vertically.

3


Fit screw into top hole and screw until fully engaged

Use these holes for MX915/MX925

Use these holes for M400/M440

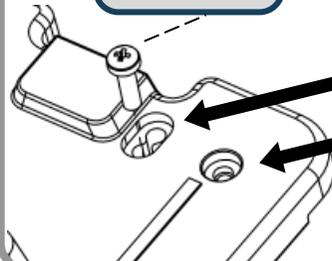

4

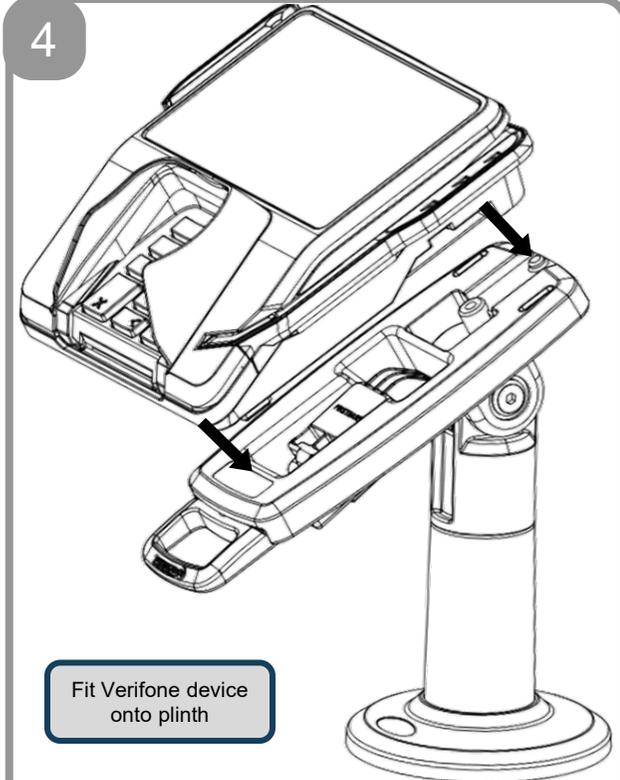

Fit VeriFone device onto plinth


5

GENERIC Device SHOWN

OPTIONAL

If locking device, turn key then remove to secure.

To unlock, first ensure key fitted.

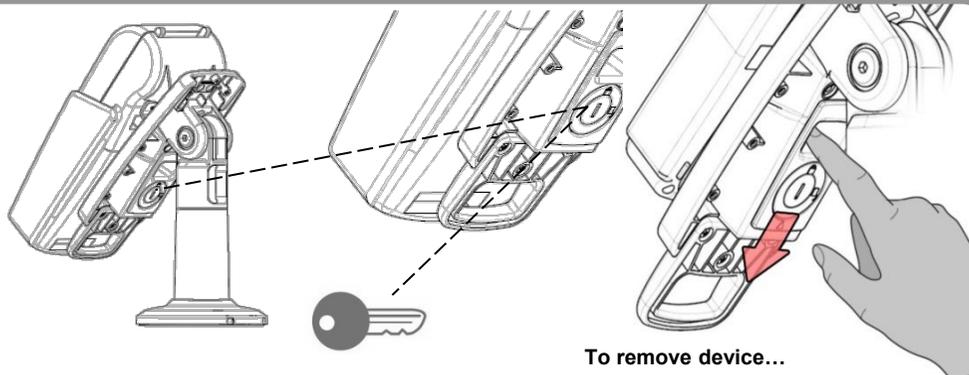

To remove device...