




TOOLS

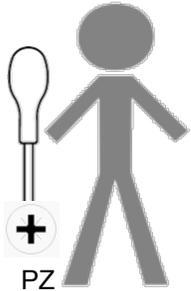

PARTS

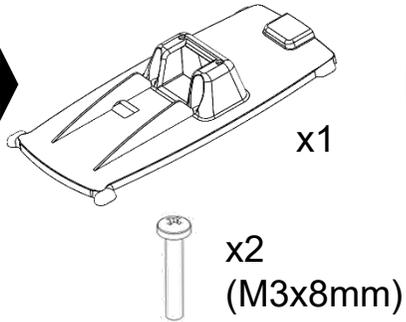


1

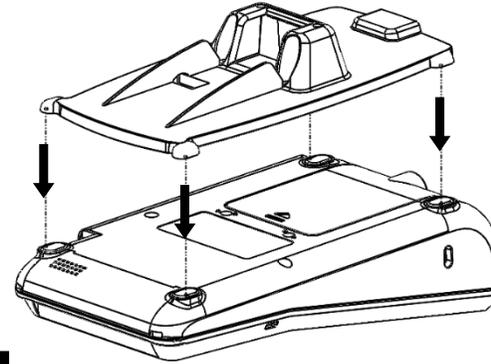

Place PEDPack onto PED in orientation shown.

Ensure corners of PEDPack align with rubber feet of PED.


2

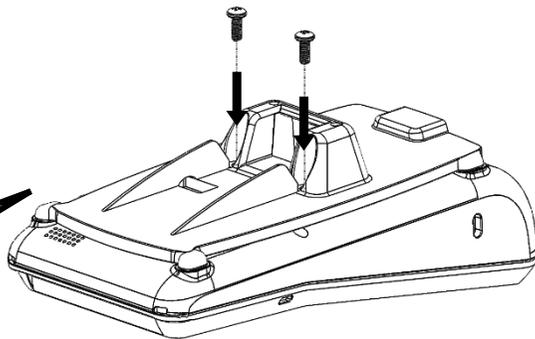

Fit screws supplied and torque to hand tight.



3

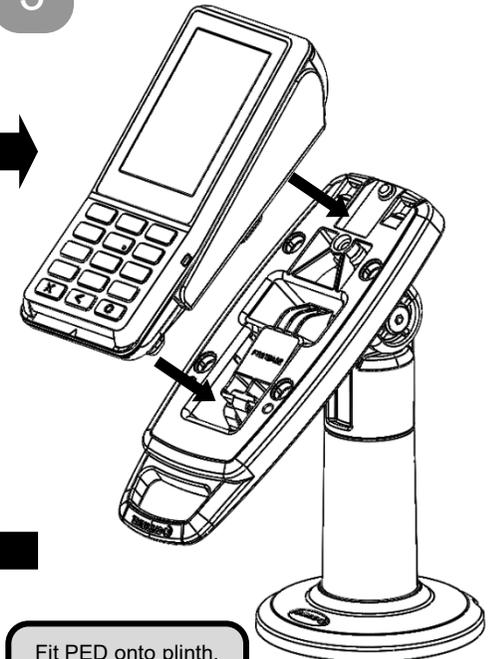



Fit PED onto plinth.
Press firmly until click.

OPTIONAL

SAFEBASE OPTION

To lock device, turn key clockwise then remove key.

To unlock, first ensure key is fitted then turn counter-clockwise.

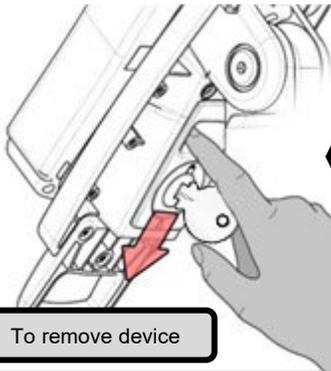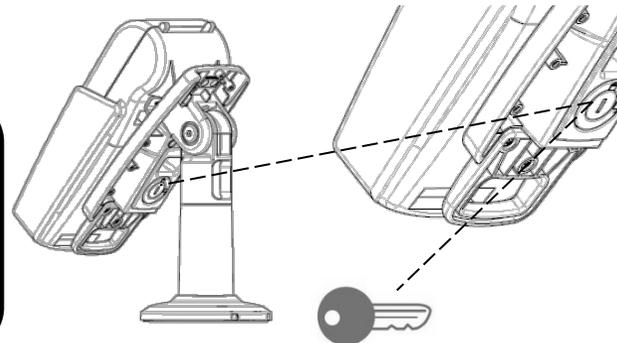

To remove device