
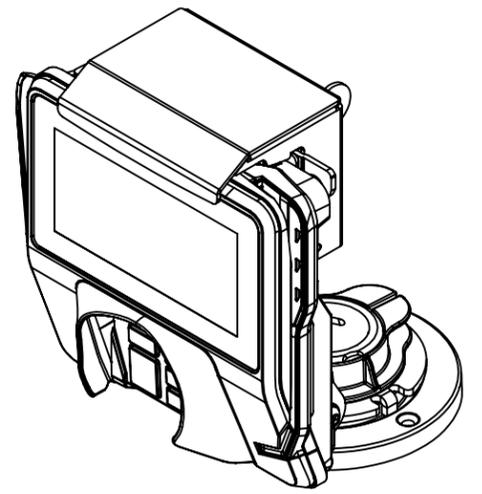


INSTALLATION INSTRUCTIONS

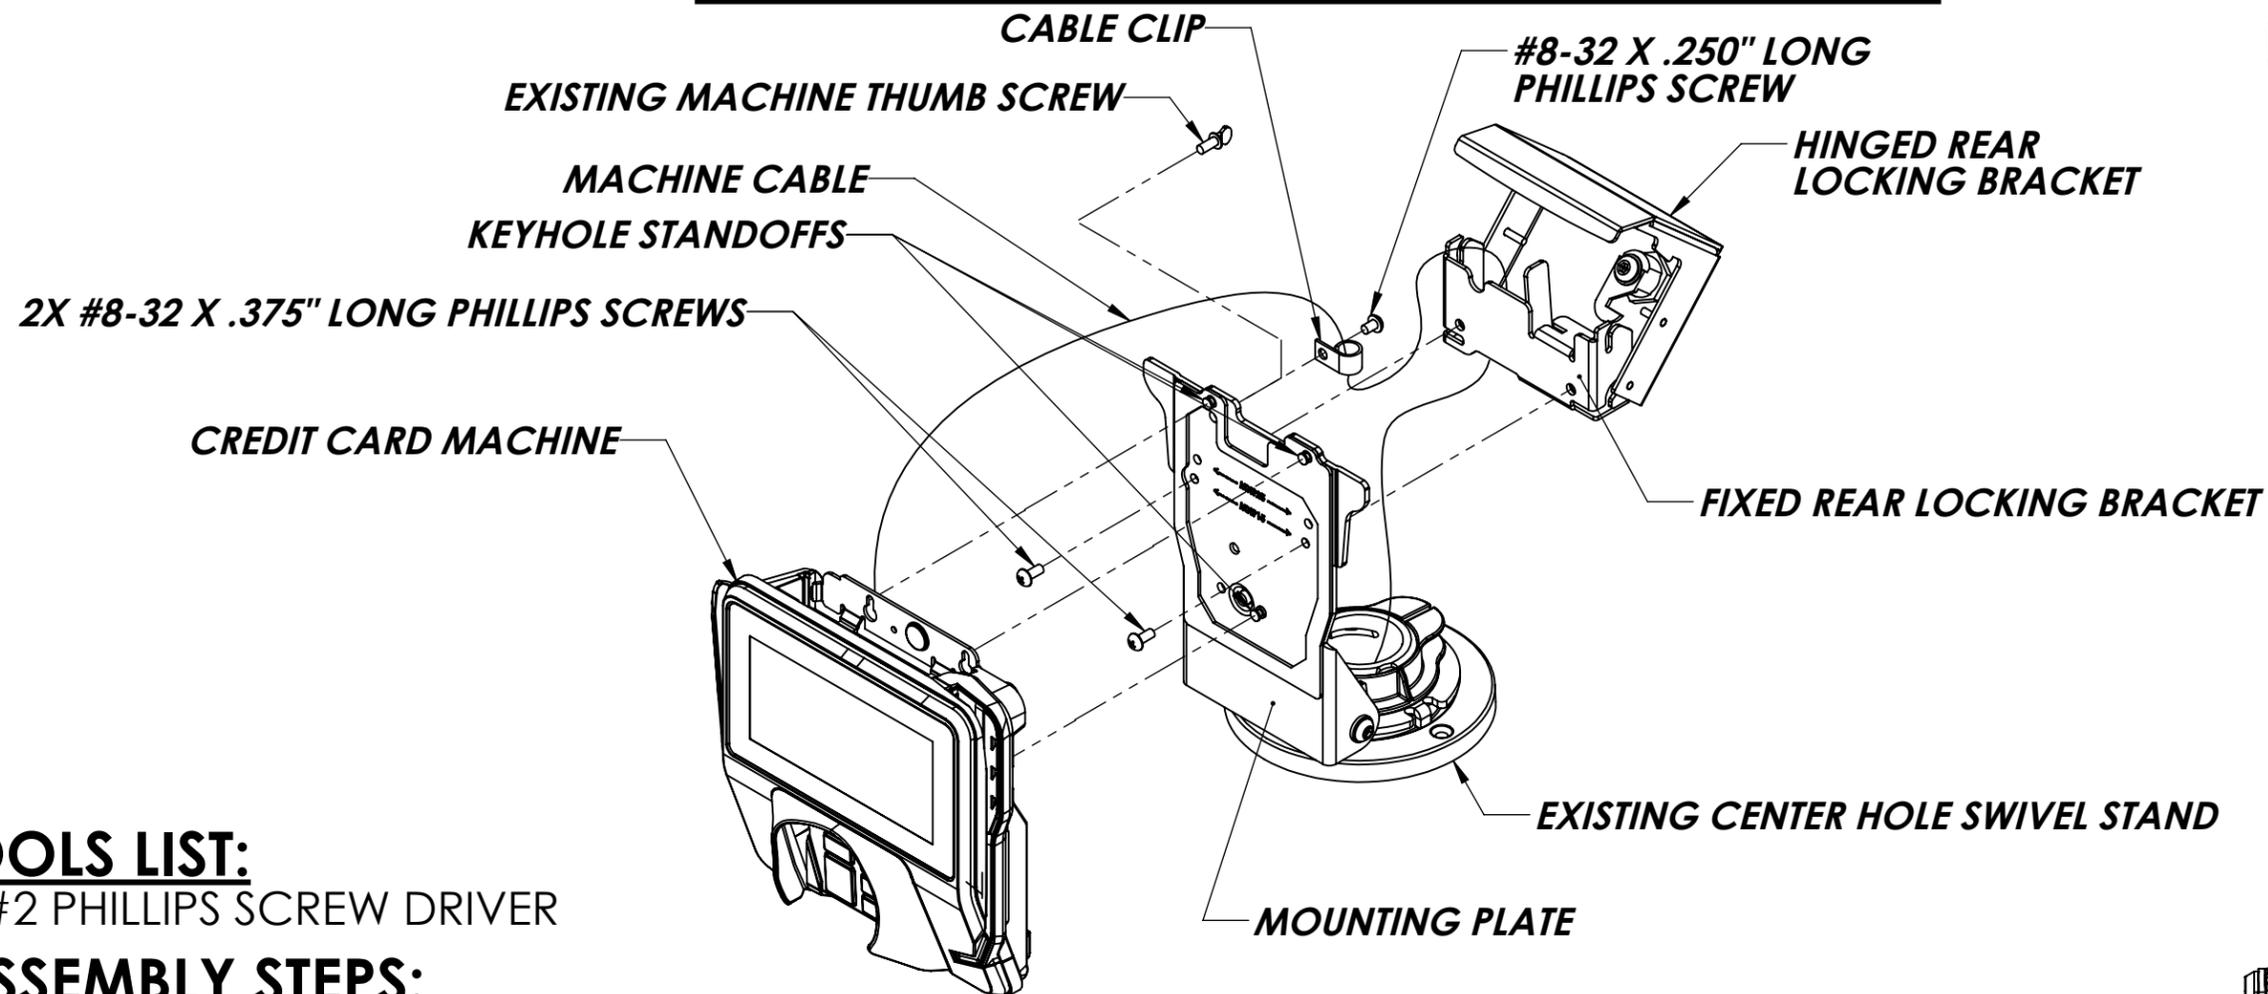


TOOLS LIST:

- #2 PHILLIPS SCREW DRIVER

ASSEMBLY STEPS:

- REMOVE **CREDIT CARD MACHINE** FROM **EXISTING CENTER HOLE SWIVEL STAND** BY REMOVING **EXISTING MACHINE THUMB SCREW** (DISCARD) AND LIFT **CREDIT CARD MACHINE** OFF OF **KEYHOLE STANDOFFS** AS SHOWN.
- ATTACH **CABLE CLIP** USING PROVIDED **#8-32 X .250" LONG PHILLIPS SCREW** AS SHOWN. (INTO HOLE THE THUMB SCREW WAS IN)
- ATTACH **FIXED REAR LOCKING BRACKET** TO **EXISTING CENTER HOLE SWIVEL STAND** BY USING **2X #8-32 X .375" LONG PHILLIPS SCREWS** AS SHOWN. MAKE SURE TO INSTALL IN LOWER HOLES (MX915) AS INDICATED ON **MOUNTING PLATE**.
- REINSTALL **CREDIT CARD MACHINE** ONTO **EXISTING CENTER HOLE SWIVEL STAND** BY SLIDING IT BACK ONTO **KEYHOLE STANDOFFS**.
- FEED **MACHINE CABLE** THROUGH **CABLE CLIP** AND **FIXED REAR LOCKING BRACKET**.
- MOVE **HINGED REAR LOCKING BRACKET** INTO PLACE AND LOCK AS SHOWN IN **DETAIL A**.

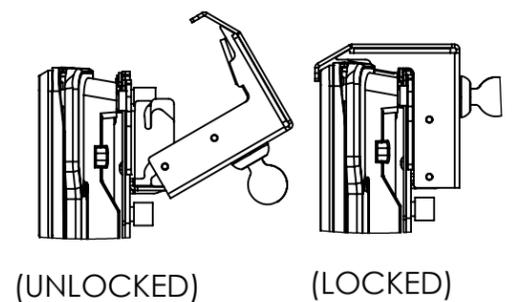

DETAIL A

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS IS PROHIBITED.

B		7/02/14	AN	AZM	
REV.	DESCRIPTION	DATE	BY	CHK'D	
	DRAWN A. NORLING				
	DATE 5/22/2014				
	CHECKED				
	DATE				
	DO NOT SCALE DRAWING				
	MATERIAL				
	N/A				
	FINISH				
	N/A				
DIMS. AND TOLERANCES PER ASME Y14.5 - 1994		 <p>TITLE CUSTOMER INSTRUCTIONS, REAR LOCKING, ADD-ON KIT, VERIFONE MX915</p>			
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:					
FRACTIONAL	± 1/32				
2 PLC. DEC.	± .03				
3 PLC. DEC.	± .010				
ANGULAR	± 0°30'				
SIZE	B	DWG. NO.	367-3048	REV.	B
				SHEET 1 OF 1	