
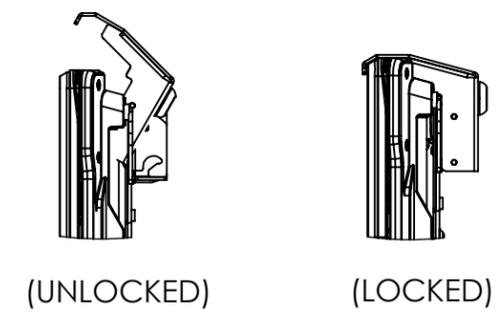
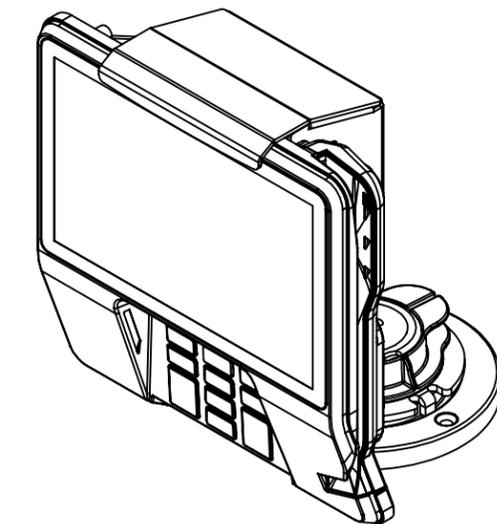


INSTALLATION INSTRUCTIONS

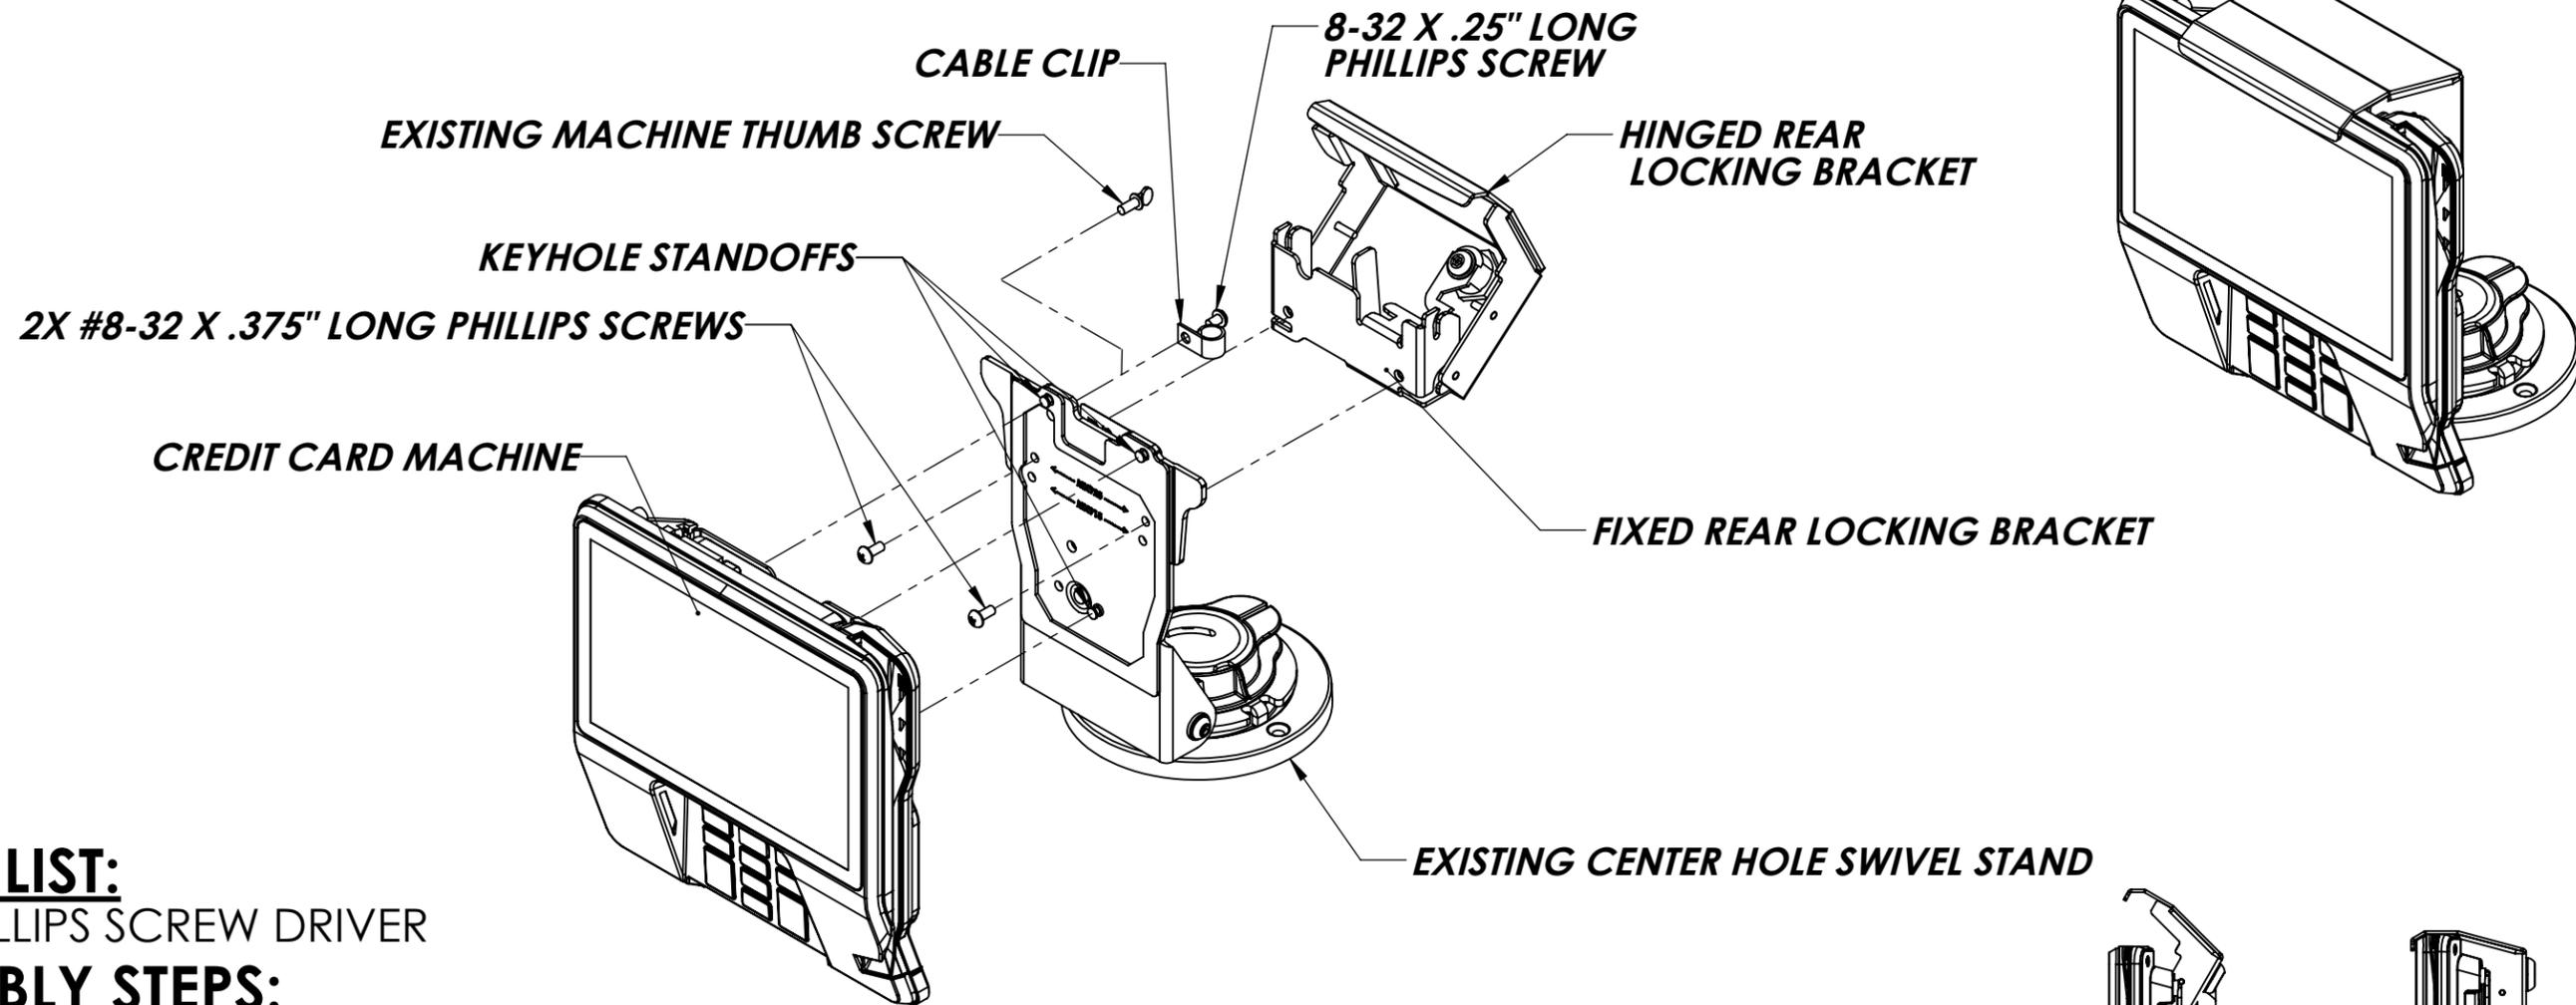

DETAIL A

TOOLS LIST:

- 1. #2 PHILLIPS SCREW DRIVER

ASSEMBLY STEPS:

1. REMOVE **CREDIT CARD MACHINE** FROM **EXISTING CENTER HOLE SWIVEL STAND** BY REMOVING **EXISTING MACHINE THUMB SCREW** AND LIFTING **CREDIT CARD MACHINE** OFF OF **KEYHOLE STANDOFFS** AS SHOWN.
2. ATTACH **CABLE CLIP** USING PROVIDED **8-32 X .25\"**
3. ATTACH **FIXED REAR LOCKING BRACKET** TO **EXISTING CENTER HOLE SWIVEL STAND** BY USING **2X #8-32 X .375\"**
4. REINSTALL **CREDIT CARD MACHINE** ONTO **EXISTING CENTER HOLE SWIVEL STAND** BY SLIDING IT BACK ONTO **KEYHOLE STANDOFFS**.
5. FEED **MACHINE CABLE** THROUGH **CABLE CLIP** AND **FIXED REAR LOCKING BRACKET**.
6. MOVE **HINGED REAR LOCKING BRACKET** INTO PLACE AND LOCK AS SHOWN IN **DETAIL A**.

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS IS PROHIBITED.

C		02/23/15	AN	AZM
REV.	DESCRIPTION	DATE	BY	CHK'D
DRAWN A. NORLING		 <p>TITLE CUSTOMER INSTRUCTIONS, REAR LOCKING, ADD-ON KIT, VERIFONE MX925</p>		
DATE	6/06/2014			
CHECKED				
DATE				
FRACTIONAL ± 1/32		DO NOT SCALE DRAWING		
2 PLC. DEC. ± .03		MATERIAL		
3 PLC. DEC. ± .010		FINISH		
ANGULAR ± 0°30'		SIZE	DWG. NO.	REV.
		B	367-3049	C
				SHEET 1 OF 1