



# INSTALLATION INSTRUCTIONS (SHEET 1)

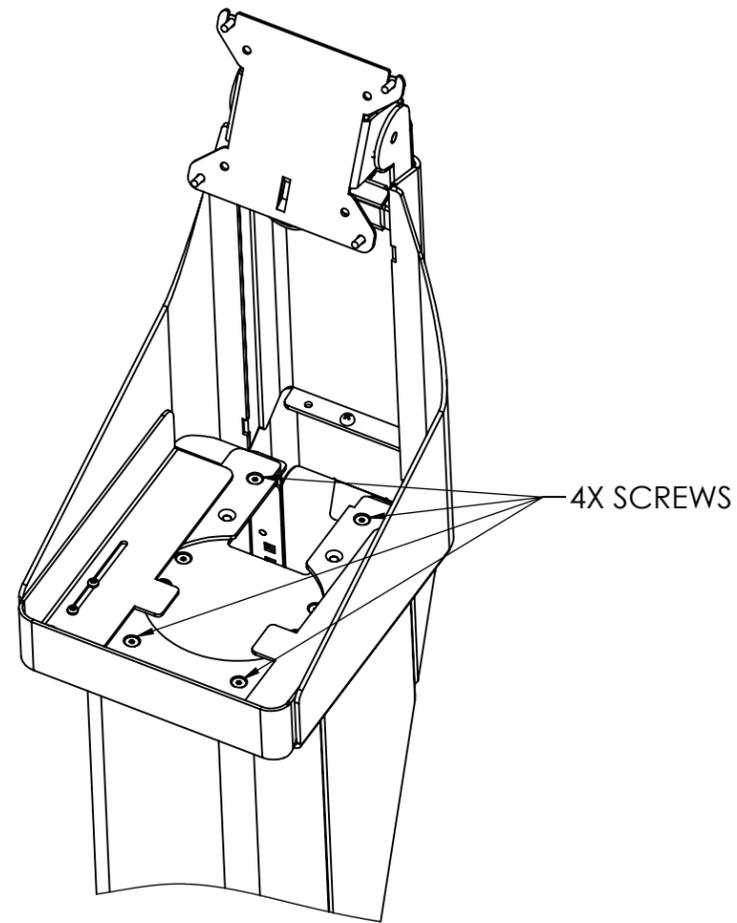

ASSEMBLY STEPS:  
1. REMOVE 4X SCREWS TO DISCONNECT  
SC-1000 HEAD UNIT FROM PEDESTAL.

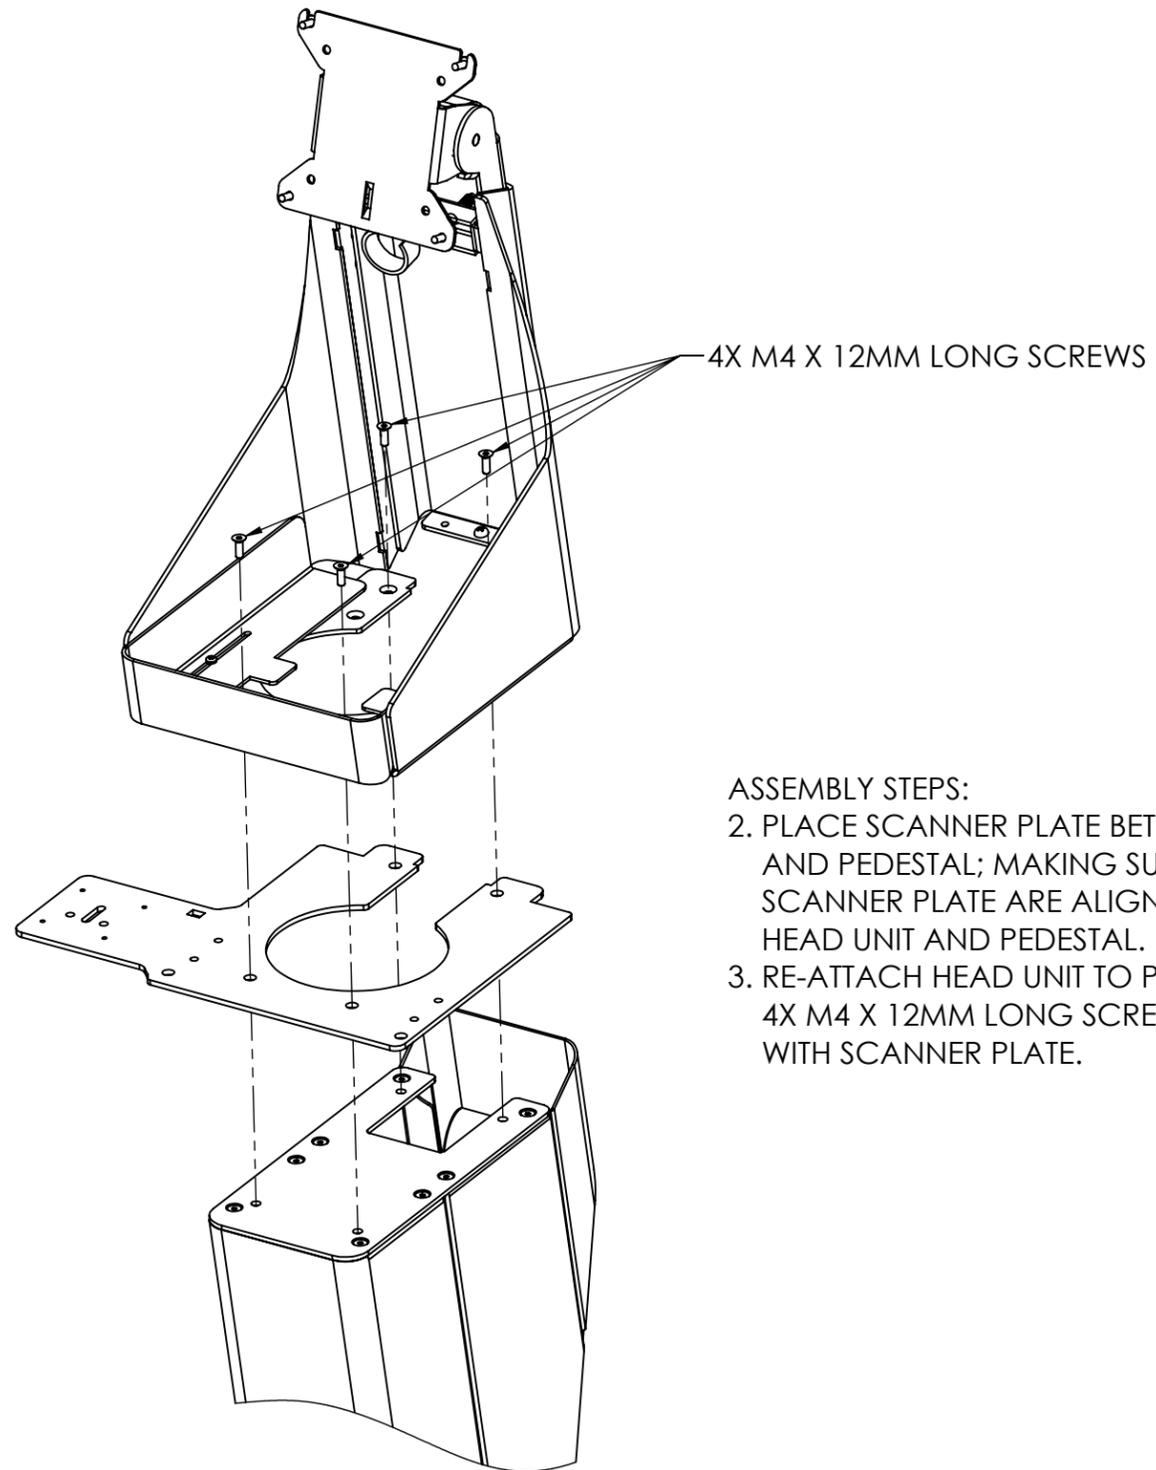

ASSEMBLY STEPS:  
2. PLACE SCANNER PLATE BETWEEN HEAD UNIT  
AND PEDESTAL; MAKING SURE HOLES IN  
SCANNER PLATE ARE ALIGNED WITH HOLES IN  
HEAD UNIT AND PEDESTAL.  
3. RE-ATTACH HEAD UNIT TO PEDESTAL WITH  
4X M4 X 12MM LONG SCREWS PROVIDED  
WITH SCANNER PLATE.

DWG. NO.  
SC-1000-ACC-14

REV.  
B

TITLE

SELF-CHECKOUT ACCESSORY,  
UNIVERSAL HANDHELD SCANNER MOUNT,  
SC-1000

DRAWN  
S. YANG

DATE  
3/27/2023

SHEET 1 OF 2

HAVIS


THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS, INC. AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS, INC. IS PROHIBITED.

## REVISIONS


REV	DESCRIPTION	DATE	BY	CHK'D
B		11/20/2023	SY	

# CUSTOMER INSTRUCTIONS

# INSTALLATION INSTRUCTIONS (SHEET 2)

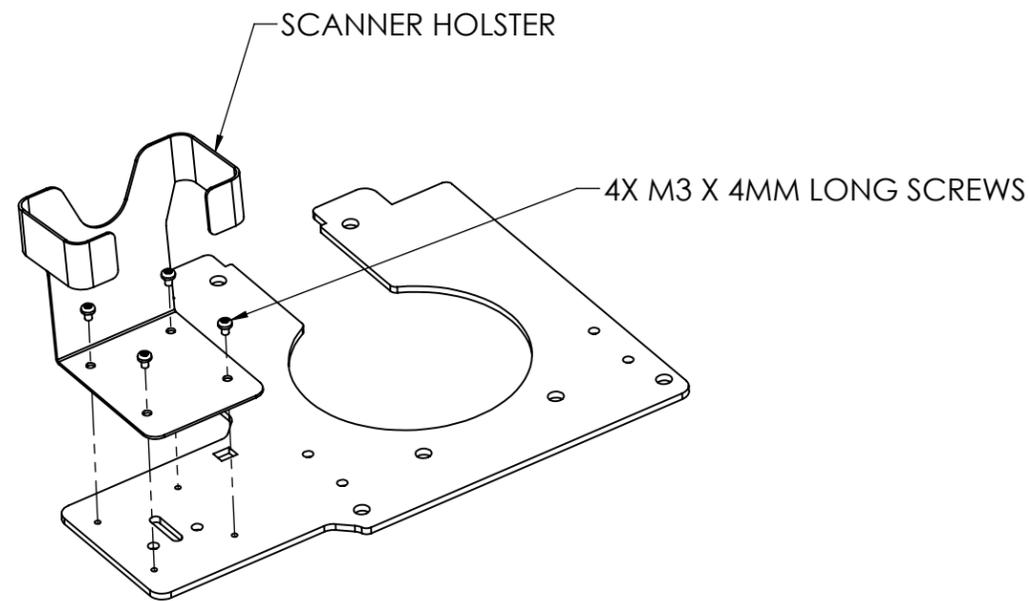

ASSEMBLY STEPS:  
4A. ATTACH SCANNER HOLSTER TO SCANNER  
PLATE WITH 4X M3 X 4MM LONG SCREWS.

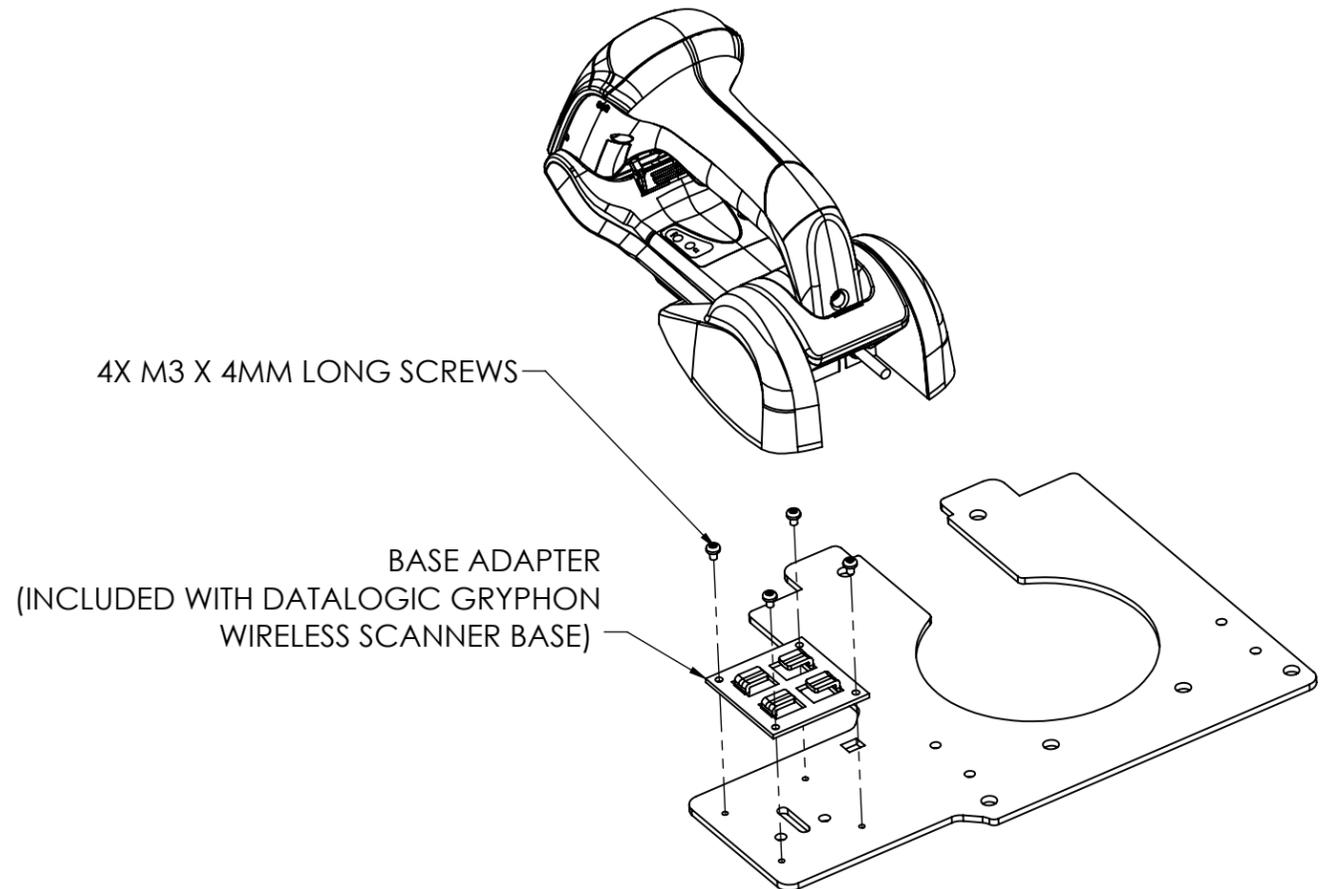

ASSEMBLY STEPS:  
4B. ATTACH BASE ADAPTER TO SCANNER  
PLATE WITH 4X M3 X 4MM LONG SCREWS.

DWG. NO. SC-1000-ACC-14	REV. B	TITLE SELF-CHECKOUT ACCESSORY, UNIVERSAL HANDHELD SCANNER MOUNT, SC-1000	 SHEET 2 OF 2
DRAWN S. YANG	DATE 3/27/2023		

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS, INC. AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS, INC. IS PROHIBITED.

CUSTOMER INSTRUCTIONS