


### 1. Install Verifone e355 payment device


- Note orientation of e355 device and case and place numeric pad end under long tab on end of case.
- Push down firmly on opposite end of e355 until it rests into position.
- Secure e355 to case with M2 x 5 phillips head screw

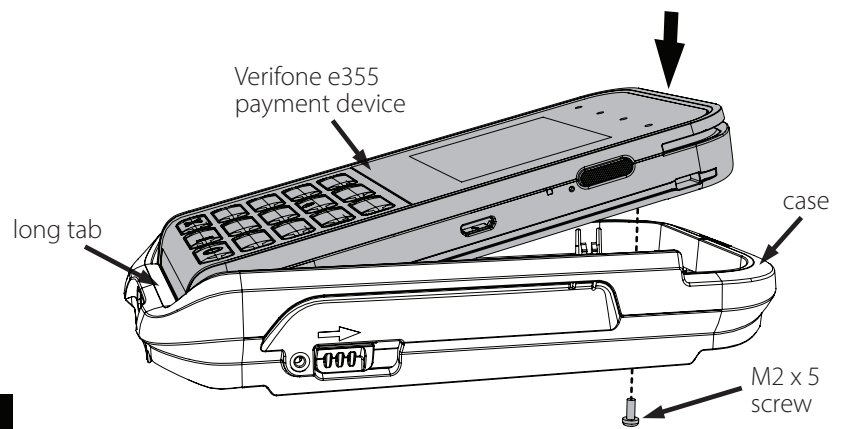

1

### 2. Install case assembly onto Zebra TC51


- \*Note: Rugged boot accessory must be installed on TC51. (see instructions included with devices).
- Note orientation of devices and place tab on case under tab on rugged boot and slide into position.

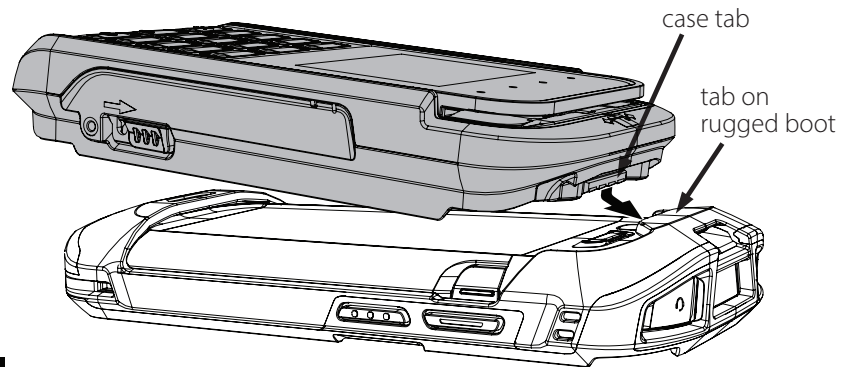

2

### 3. Secure case assembly to Zebra TC51


- Slide release levers on both sides of case in direction of arrow shown.
- While holding release levers, push down on end of case until levers slide into position.
- Check to make sure case is secured.

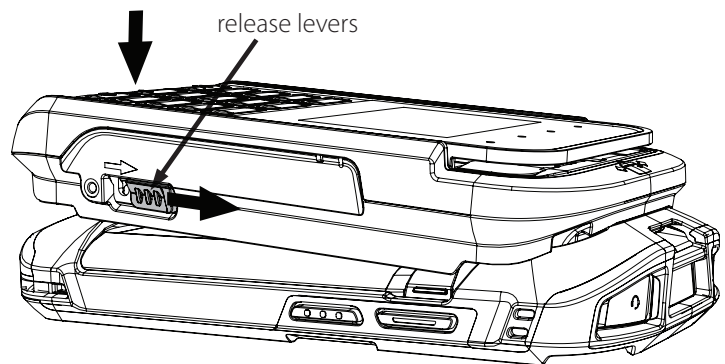

3

### 4. Lock assembly together (optional)


- For situations requiring a more secured assembly, install (2x) 4-40 x 3/16" phillips head screws into sides of case as shown.

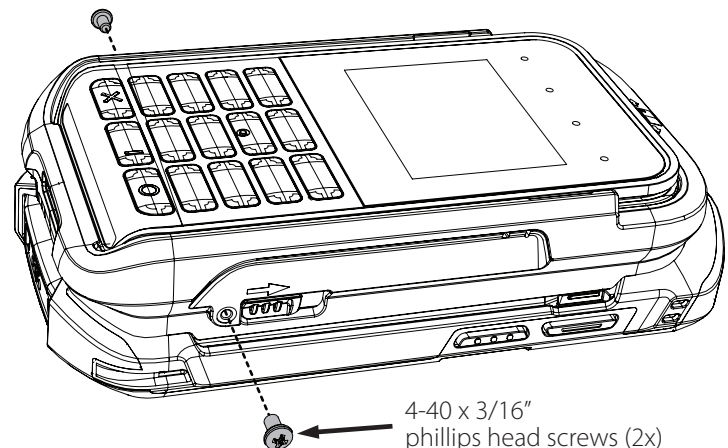

4

### 5. Unlock case from Zebra TC51 (optional)


- If optional screws were used for a more secure assembly, remove.

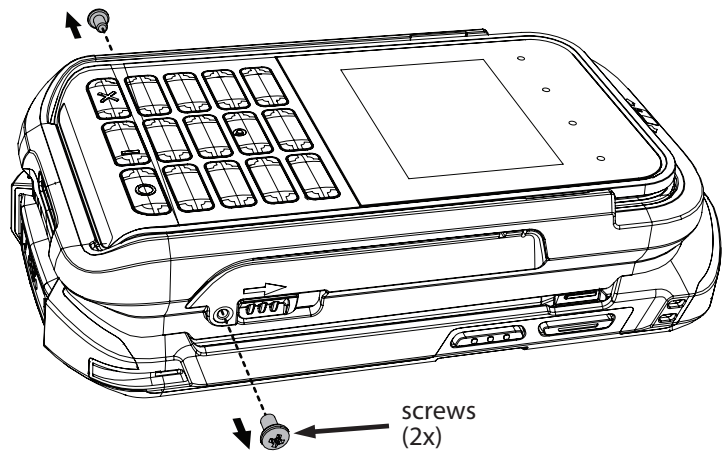

5

### 6. Release case assembly from Zebra TC51


- Slide release levers on both sides of case in arrow direction as shown and pull up on end of case.

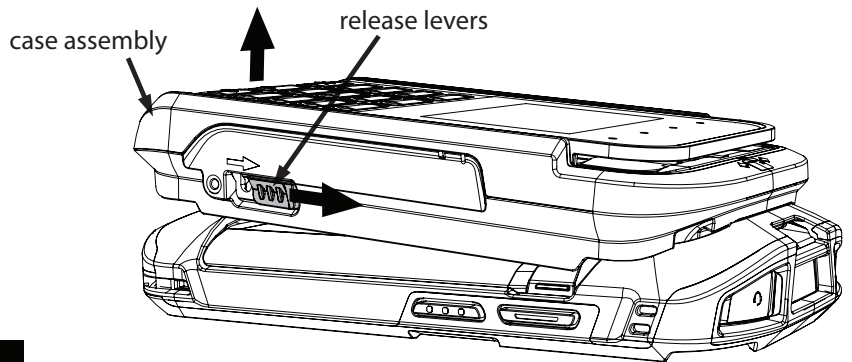

6

### 7. Remove case assembly from Zebra TC51


- After case assembly is released from TC51, pull case assembly away from TC51.

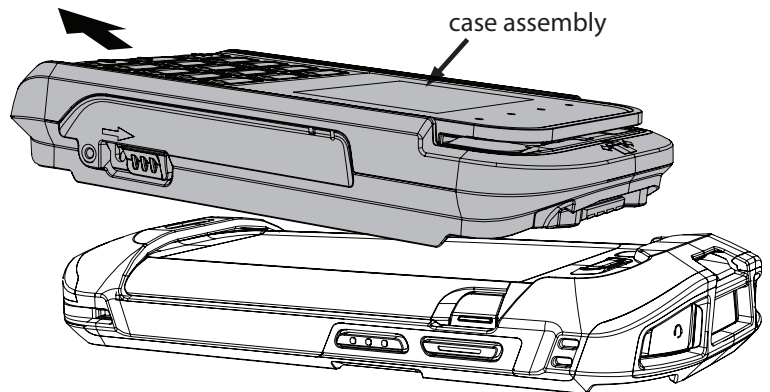

7

### 8. Remove Verifone e355 from case

- Remove M2 phillips head screw from case.
- Grasp end of e355 payment device and pull up and out of case.

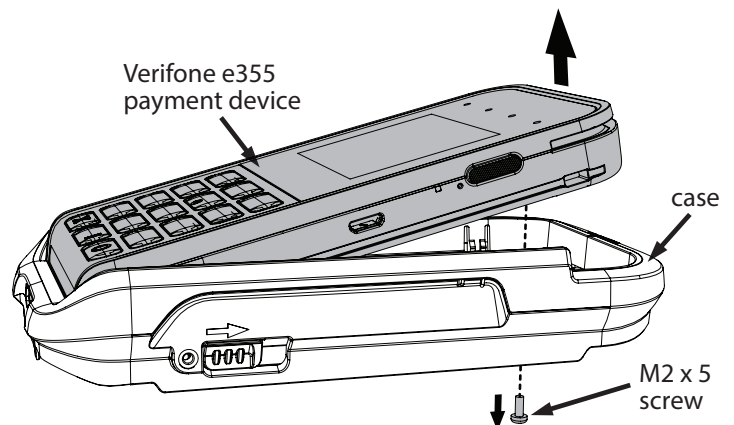

8