



**PAX S300**

**BACKPLATE**

**M5 X 8MM LONG  
PHILLIPS SCREW**

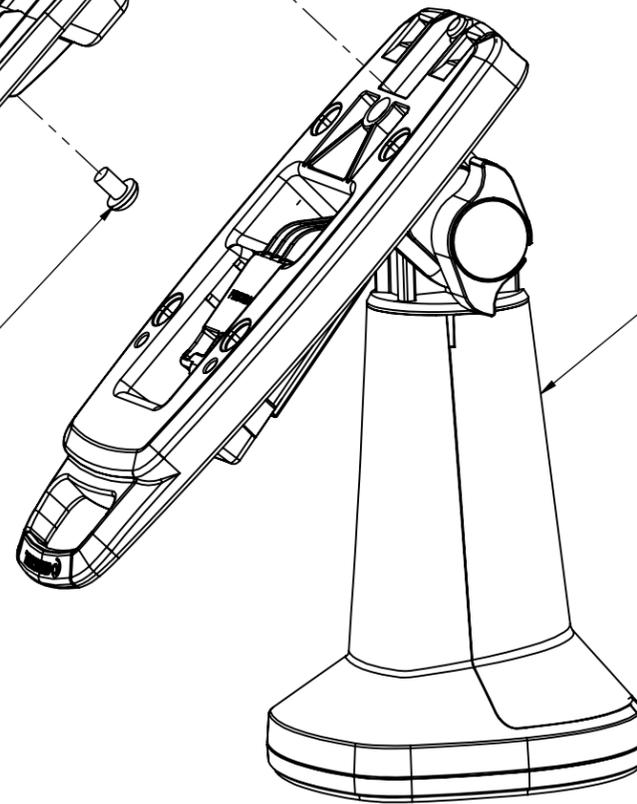

**TAILWIND FLEXIPOLE  
PLUS STAND  
(SOLD SEPARATELY)**

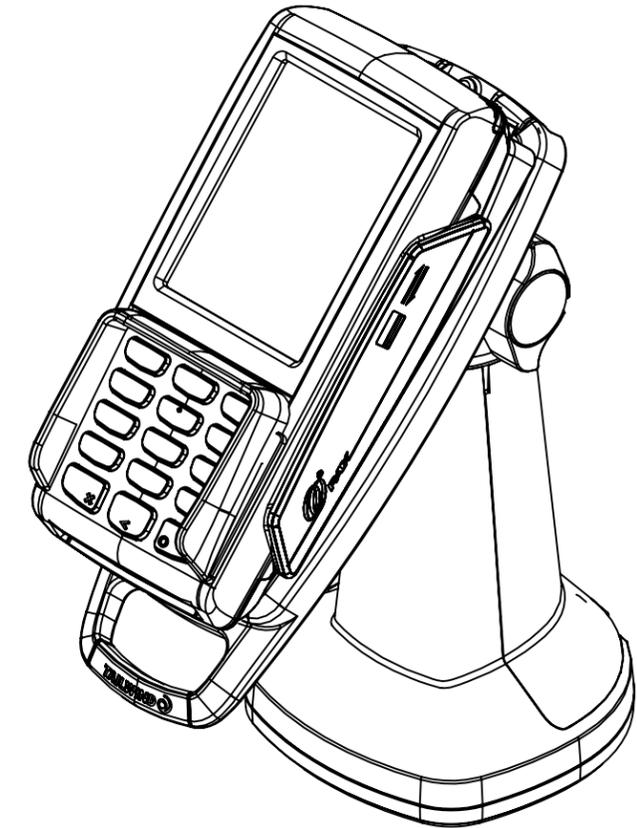

**TOOL LIST:**

1. #2 PHILLIPS SCREW OR DRILL DRIVER

**ASSEMBLY STEPS:**

1. CONNECT **PAX S300** TO **BACKPLATE** AND SECURE USING **M5 X 8MM LONG PHILLIPS SCREW**.
2. ATTACH THE **PAX S300/BACKPLATE** TO THE **TAILWIND FLEXIPOLE PLUS STAND** BY SNAPPING IT INTO PLACE AS SHOWN.
3. ROUTE THE **DEVICE CABLE** AS DESIRED.

DWG. NO. CST00198	REV. A	TITLE PAX S300 PEDPACK
DRAWN A. NORLING	DATE 6/25/2021	


  
 SHEET 1 OF 1

REVISIONS				
REV	DESCRIPTION	DATE	BY	CHK'D
A	RELEASED FOR PRODUCTION	06/25/21	AN	AN

**CUSTOMER INSTRUCTIONS**