



INSTALLATION INSTRUCTIONS

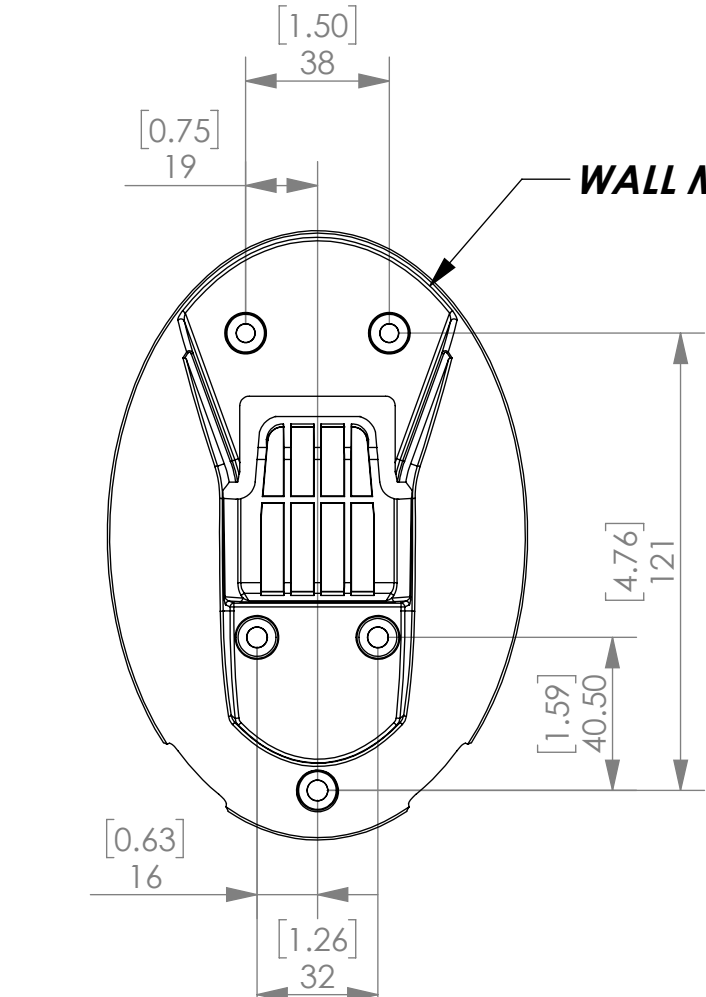

WALL MOUNT DETAILS
(MOUNTING HARDWARE NOT INCLUDED)
(HOLE SIZED FOR #10 SCREWS)


ASSEMBLY STEPS 1&2

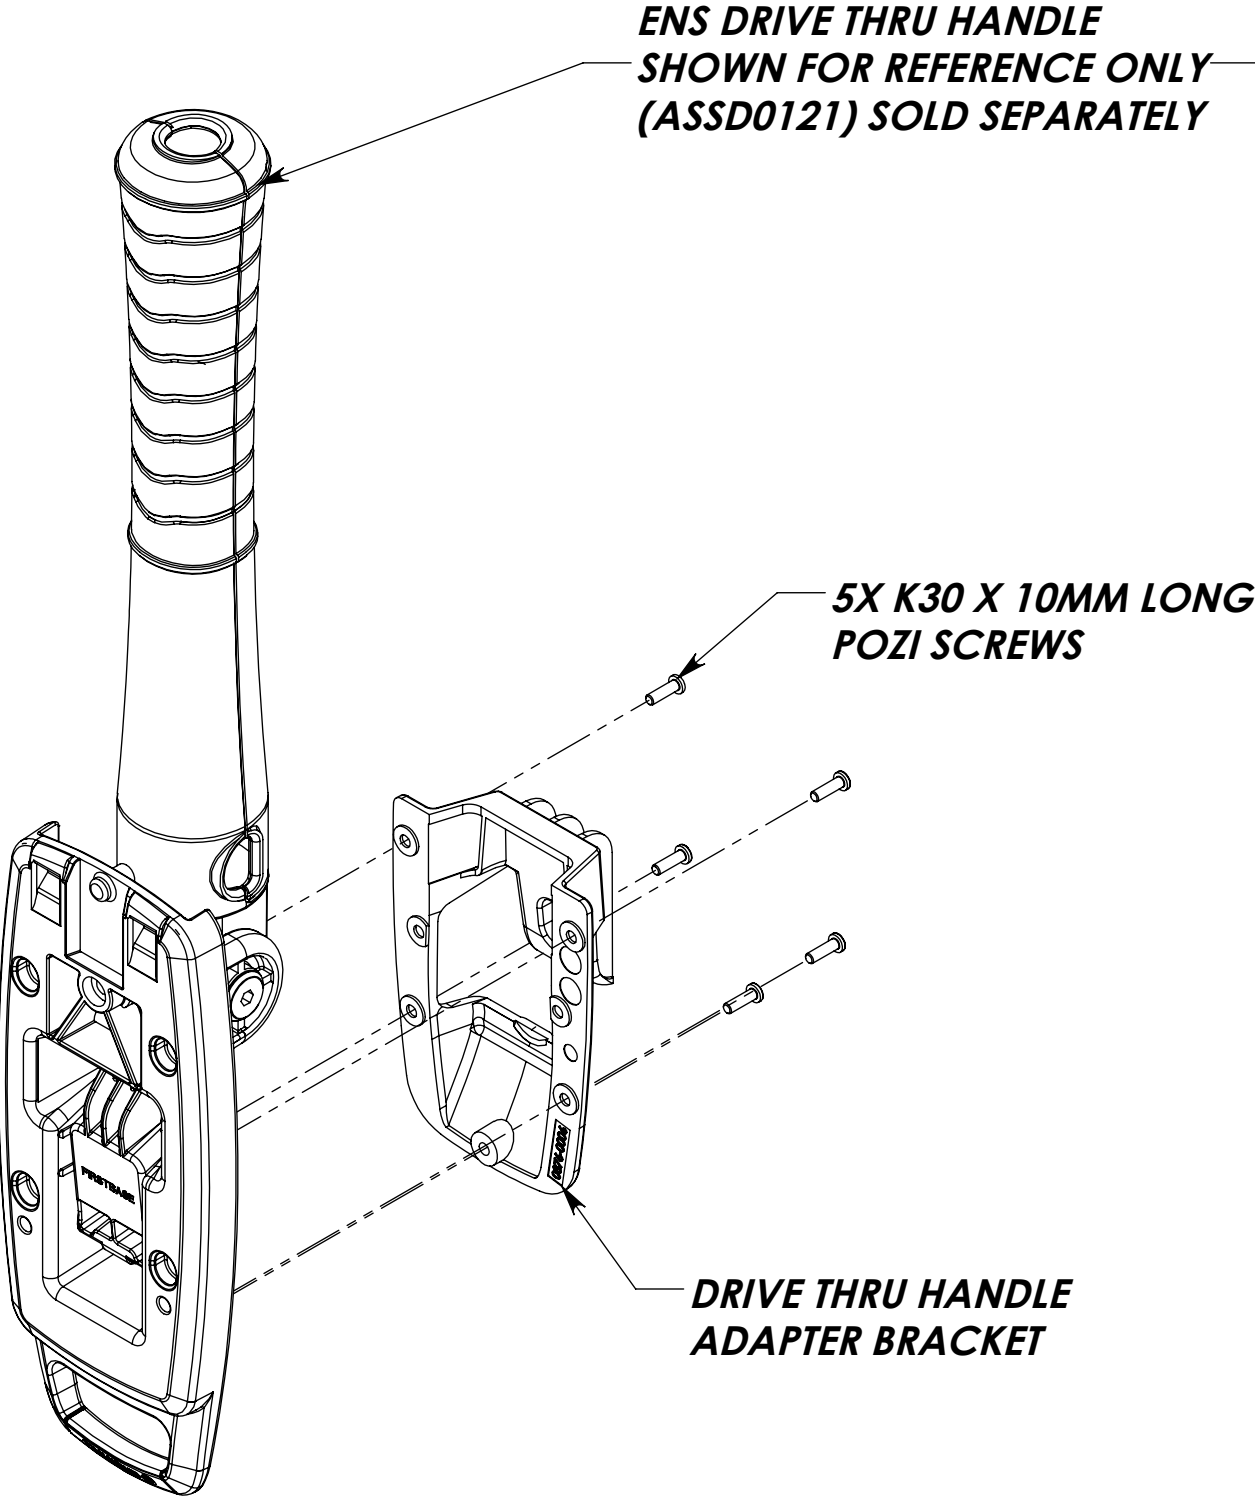

ASSEMBLY STEP 3

- TOOL LIST:**
1. #2 SCREW DRIVER OR DRILL DRIVER
 2. 3/32" DRILL BIT WITH DRILL DRIVER
 3. PZ1 POZI DRIVE SCREW DRIVER

- ASSEMBLY STEPS:**
1. DRILL 4X 3/32" DIAMETER PILOT HOLES IN THE WALL AT DESIRED LOCATION USING THE **WALL MOUNT BRACKET** AS A TEMPLATE.
 2. ATTACH THE **WALL MOUNT BRACKET** TO THE WALL BY USING **5X #10 SCREWS (NOT SUPPLIED)**. USE SUITABLE SCREWS FOR MOUNTING SURFACE.
 3. ASSEMBLE THE **DRIVE THRU HANDLE ADAPTER BRACKET** TO THE **ENS DRIVE THRU HANDLE (SOLD SEPARATELY)** USING **5X K30 X 10MM LONG POZI SCREWS** AS SHOWN.
 4. SLIDE THE **DRIVE THRU HANDLE ASSEMBLY** INTO THE **WALL MOUNT BRACKET** AS SHOWN.
- NOTE:** THE **DRIVE THRU HANDLE ASSEMBLY** MUST BE FULLY STRAIGHT TO INSERT INTO THE **WALL MOUNT BRACKET**.

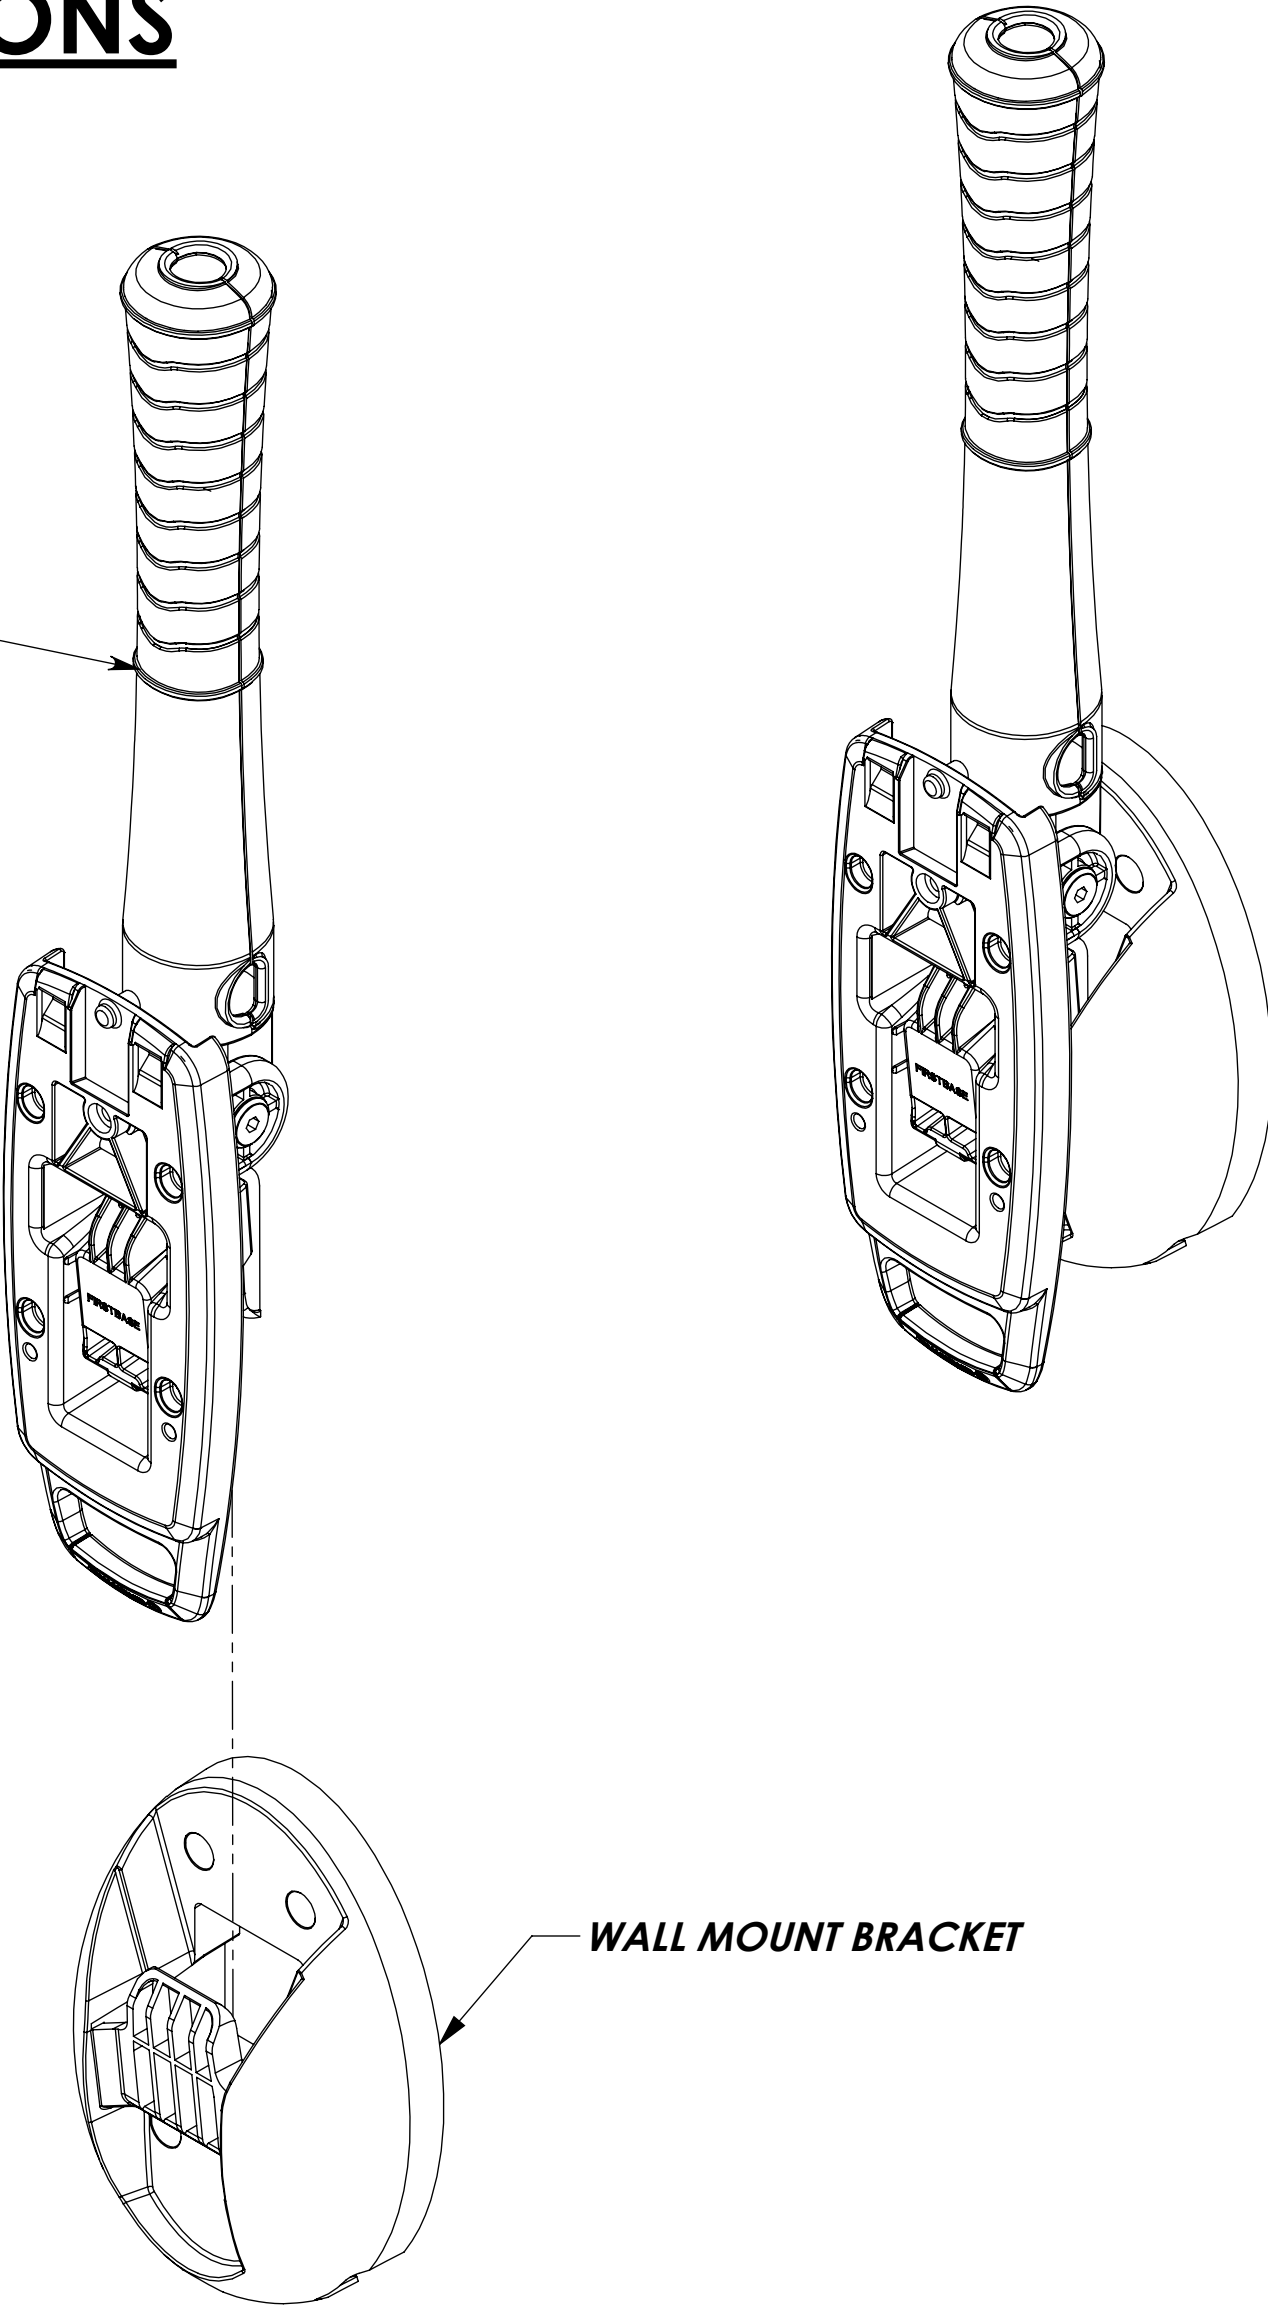

ASSEMBLY STEP 4

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS IS PROHIBITED.

DIMS. AND TOLERANCES PER ASME Y14.5 - 1994 UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:		DRAWN A. SCHLEY	HAVIS		
FRACTIONAL ± 1/32		DATE 05/27/20			
2 PLC. DEC. ± .03		CHECKED	TITLE CUSTOMER INSTRUCTIONS DRIVE THRU HANDLE WALL MOUNT AND PLINTH BRACKET		
3 PLC. DEC. ± .010		DATE			
ANGULAR ± 0°30'		DO NOT SCALE DRAWING	SIZE C		
		MATERIAL			
		FINISH	DWG. NO. CST00159		
			REV. A	SHEET 1 OF 1	